
BLACK MODULAR PROLINE LINEAR PENDANT OR SURFACE MOUNT

Installation Instructions

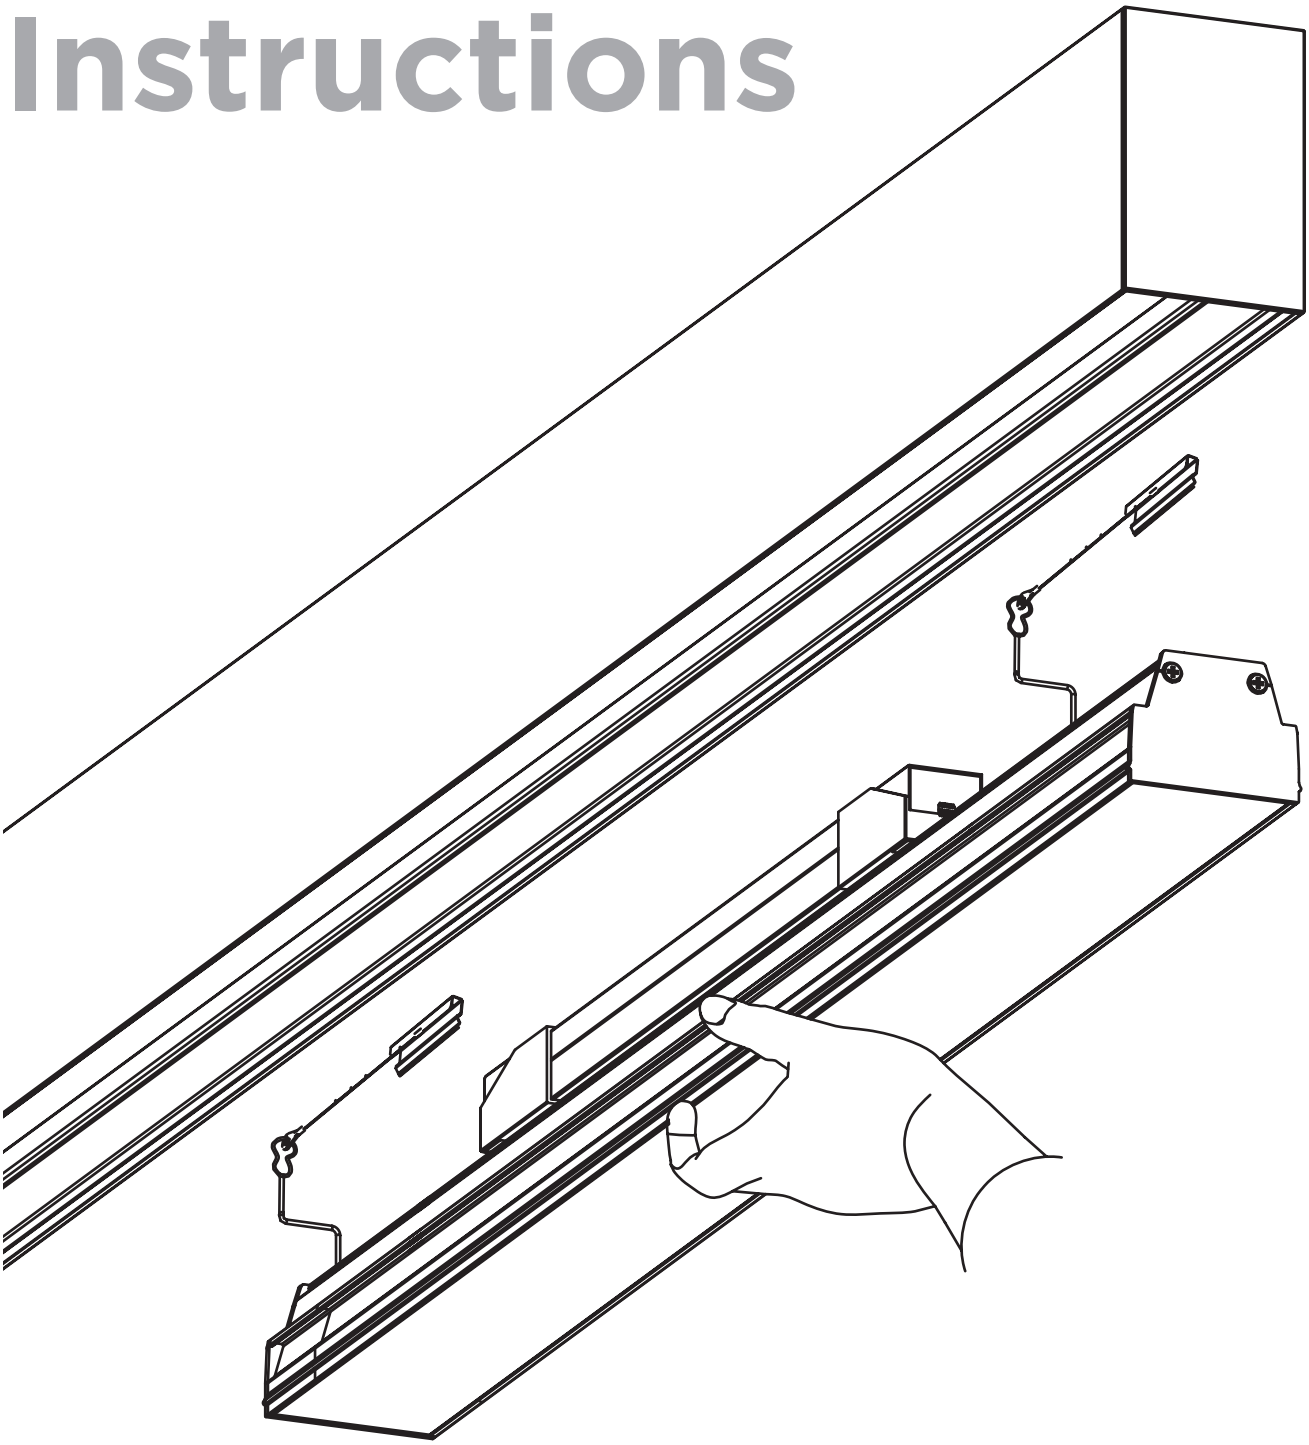

Web: www havitcommercial.com.au
Email: sales@havitcommercial.com.au
Phone: 02 9381 8383


ADDRESS: 8/133 Beauchamp Road, Matraville, N.S.W., 2036

Warranty Terms & Conditions

www.havitcommercial.com.au

BLACK MODULAR PROLINE LINEAR PENDANTS OR SURFACE MOUNT INSTALLATION INSTRUCTIONS


Cutting Aluminium Profile

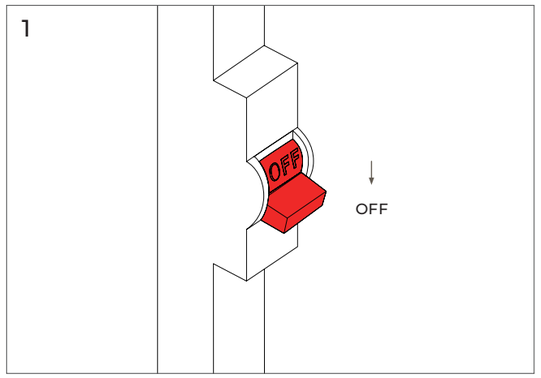


1. Turn Off Main Switch

MODULE SIZES					
	HCP-602010 HCP-602030 HCP-602050 HCP-602060 HCP-602070	HCP-602020	HCP-602040	HCP-602082 HCP-602083 HCP-602084 HCP-602085	HCP-602093 HCP-602094
0.6M	600MM	600MM	600MM	404MM	404MM
1.2M	1196MM	1196MM	1140MM		
1.8M		1792MM			
2.4M	2388MM		2276MM		


2. Calculate the required length of the profile according to module chosen, Size of each module are in table above

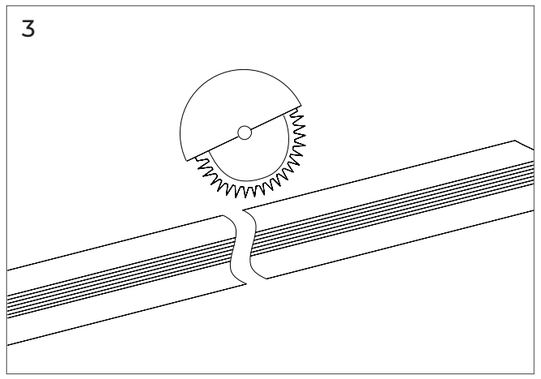


3. Cut the profile to correct length

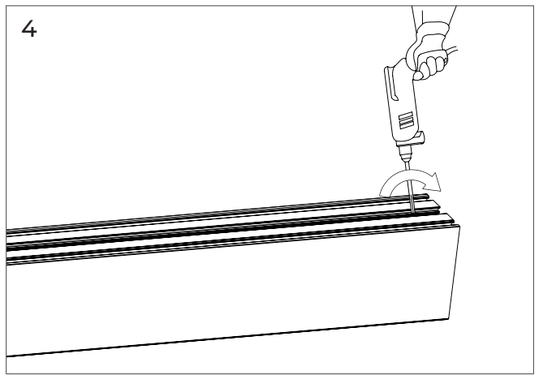

4. Drill a hole with a diameter of 10mm on the side according to the position where the cable connection wire needs to go out.

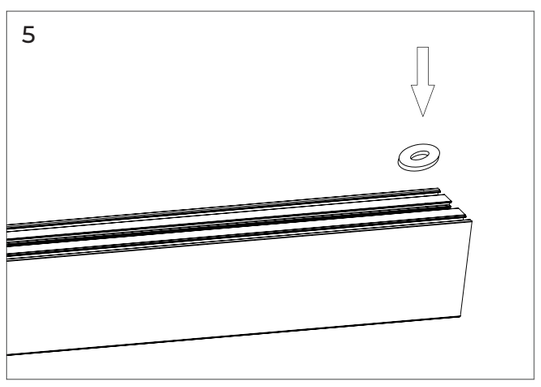


5. Install Cable Grommet using 10mm hole drilled earlier

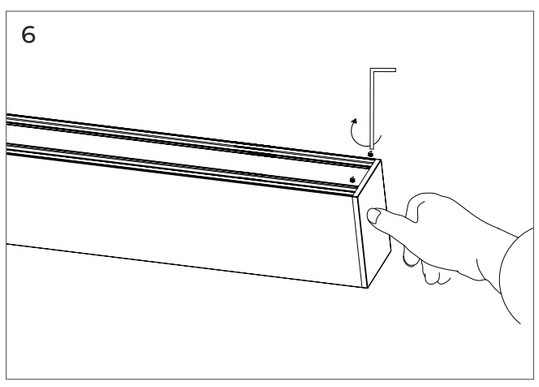


6. Attach End caps and tighten allen screws


Pendant

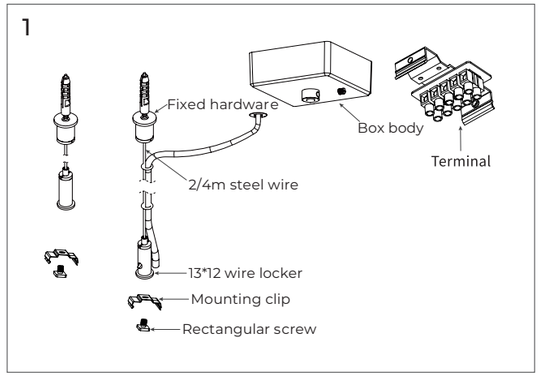


1. Prepare the necessary accessories for Installation

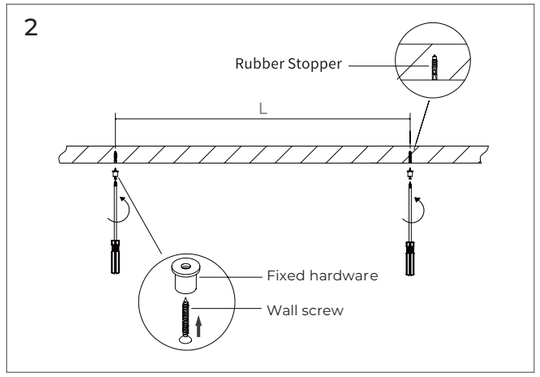


2. Select the appropriate distance (L), Attach the Expansion sleeve into corresponding position and fix the lifting hardware accessories

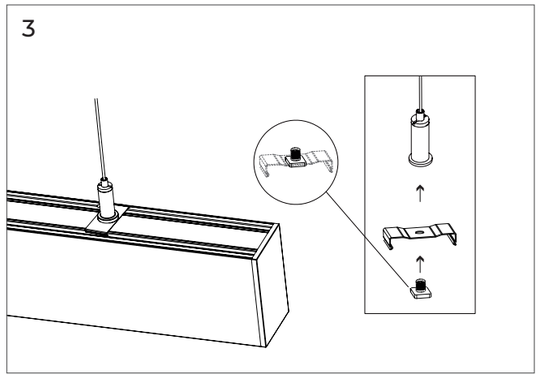


3. Tighten the other end of the cable and fix it on the clip, Then fix the clip onto the profile.

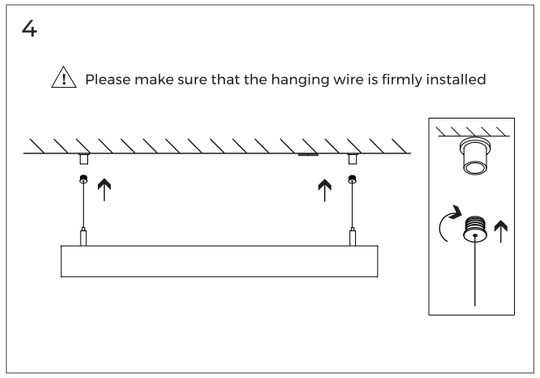

4. Connect the suspension cable to the Corresponding locations already attached to ceiling

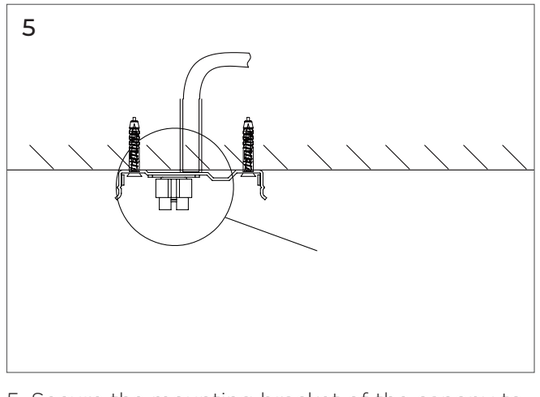


5. Secure the mounting bracket of the canopy to ceiling with appropriate scews.

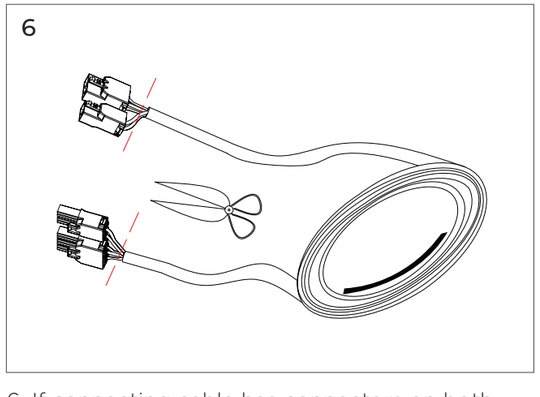


6. If connecting cable has connectors on both ends, Cut off the opposite end required to Connect to module being installed

BLACK MODULAR PROLINE LINEAR PENDANTS OR SURFACE MOUNT INSTALLATION INSTRUCTIONS


Pendant

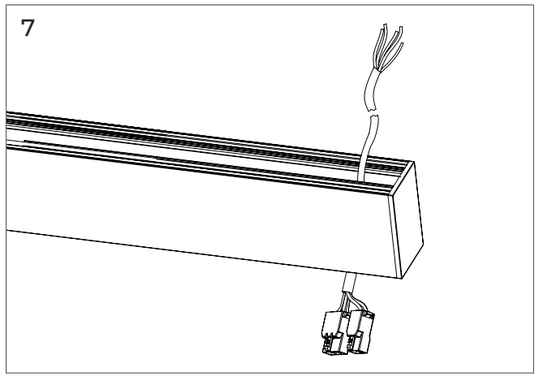


7. Insert cable into the hole drilled earlier

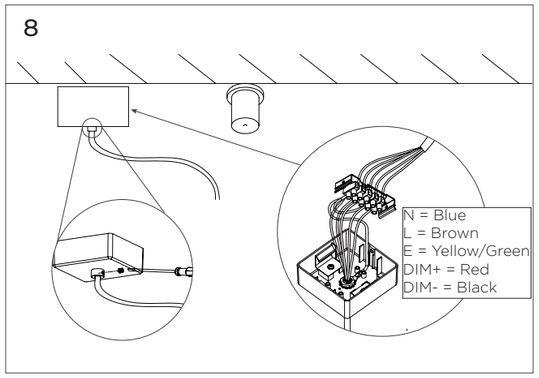


8. Insert cable through hole of canopy and and connect cables to terminal block located on mounting bracket.

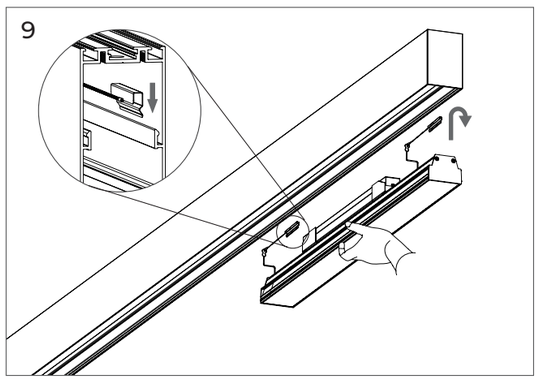


9. Hold the module with one hand and hang the safety cable with the other.

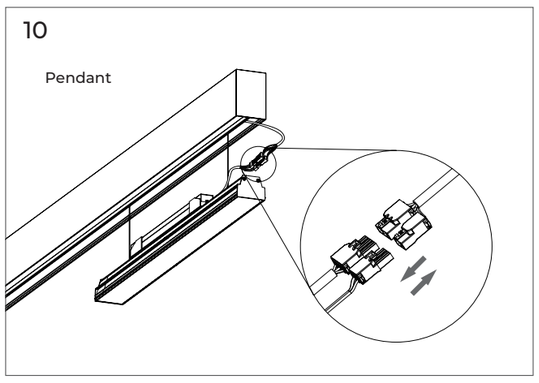

10. Refer to the wiring diagram to connect the power and pair up the male and female plugs

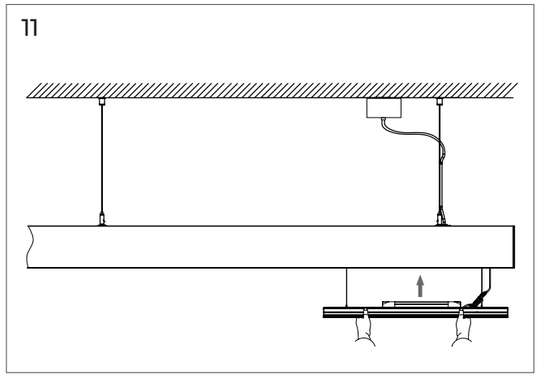


11. Insert module into profile until firmly into place.

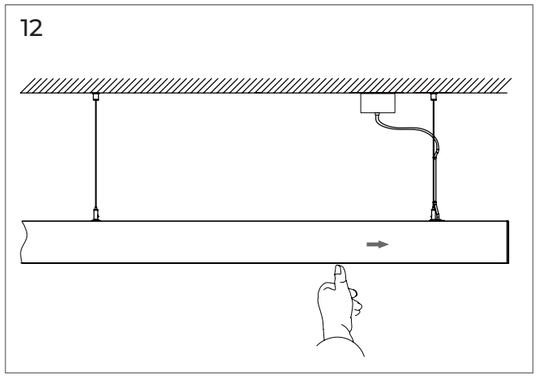


12. Push the module into the position required in the profile

Pendant

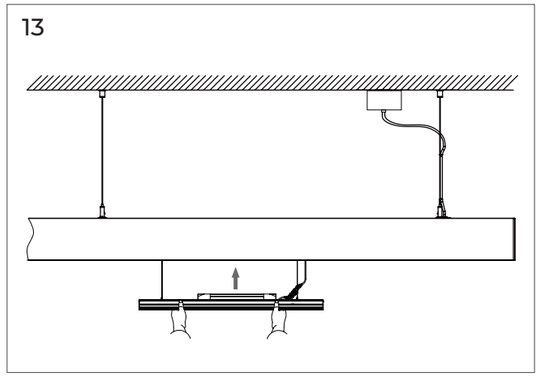


13. Repeat the previous steps and insert all Remaining modules if necessary.

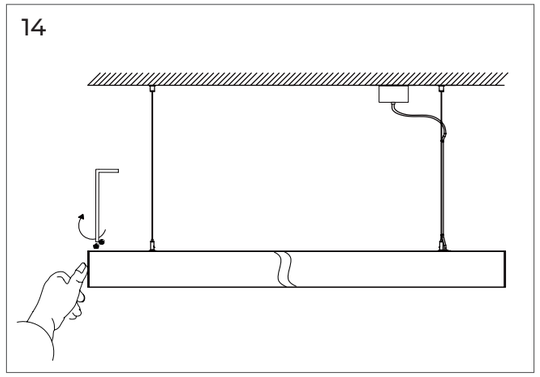


14. After installing all modules, Attach the end cap and tighten locking screws.

BLACK MODULAR PROLINE LINEAR PENDANTS OR SURFACE MOUNT INSTALLATION INSTRUCTIONS


Surface Mount

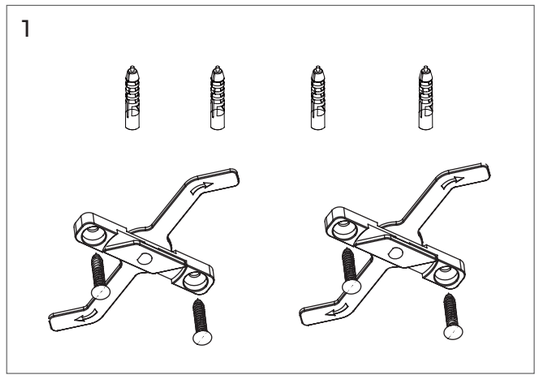


1. Prepare the necessary accessories for Installation

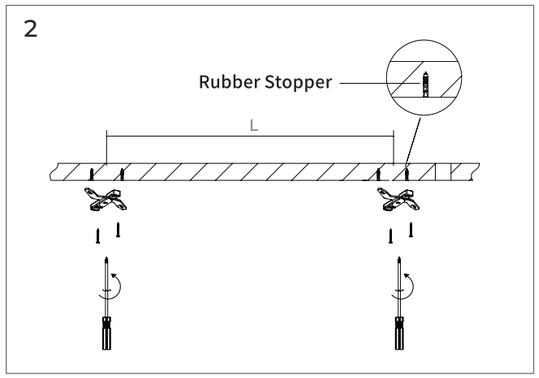


2. Measure the distance (L) between clips, Attach the clips with screws.

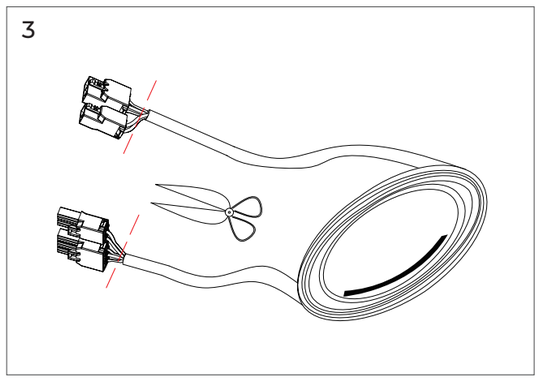


3. If connecting cable has connectors on both ends, Cut off the opposite end required to Connect to module being installed

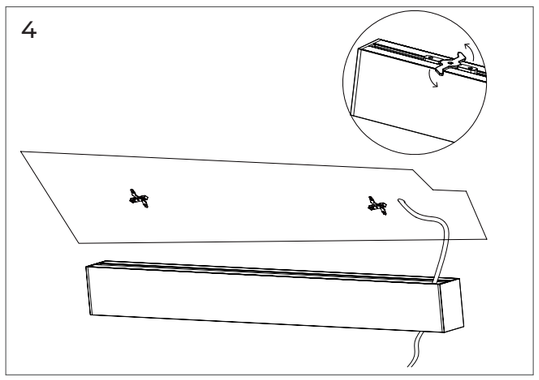

4. Insert cable into the hole drilled earlier

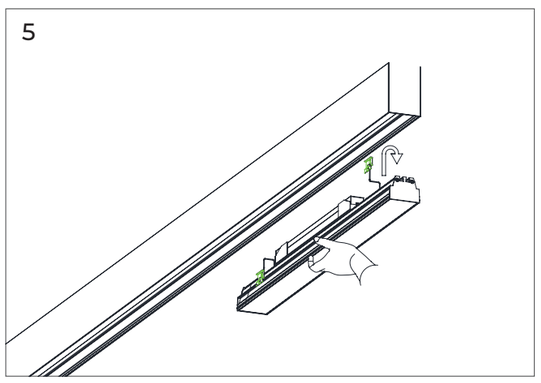


5. Hold the module with one hand and hang the safety cable with the other.

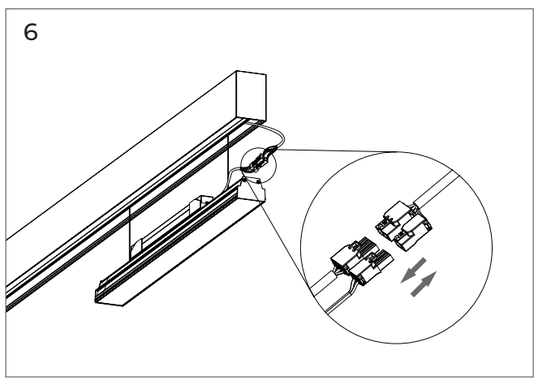


6. Refer to the wiring diagram to connect the power and pair up the male and female plugs


Surface Mount

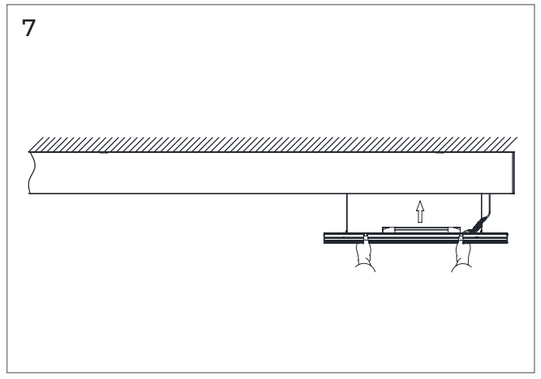

7. Plug the terminal into the profile and snap the module upwards into place

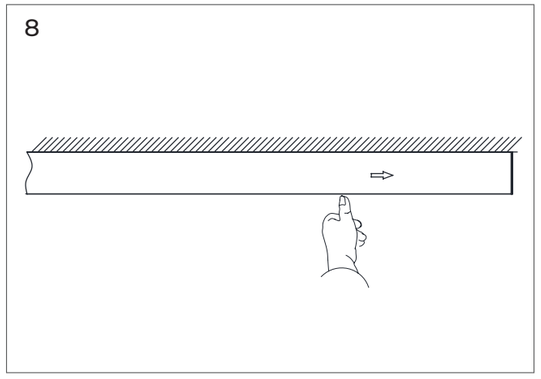


8. Push the module into the position required in the profile

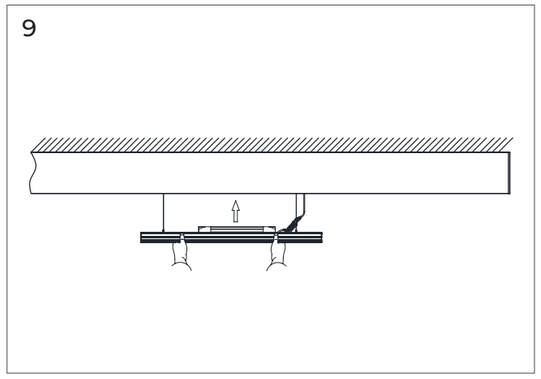


9. Repeat the previous steps and insert all Remaining modules if necessary.

BLACK MODULAR PROLINE LINEAR PENDANTS OR SURFACE MOUNT INSTALLATION INSTRUCTIONS


Joiner

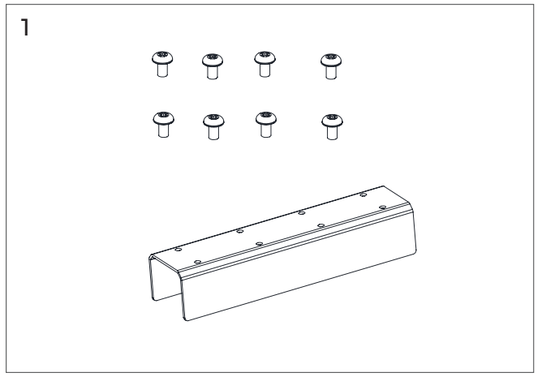


1. Prepare the required accessories.

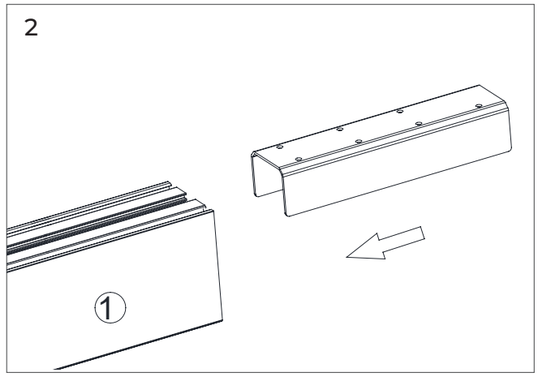


2. Insert the joiner into the profile

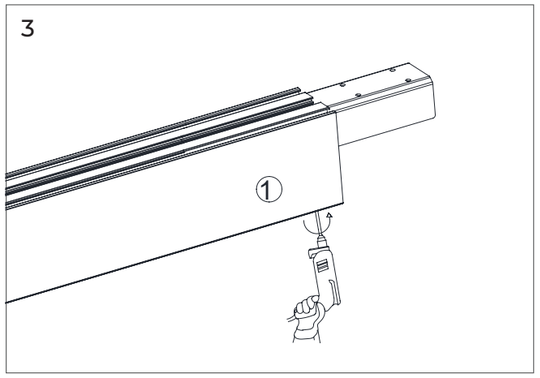


3. Attach all Screws on 1 end

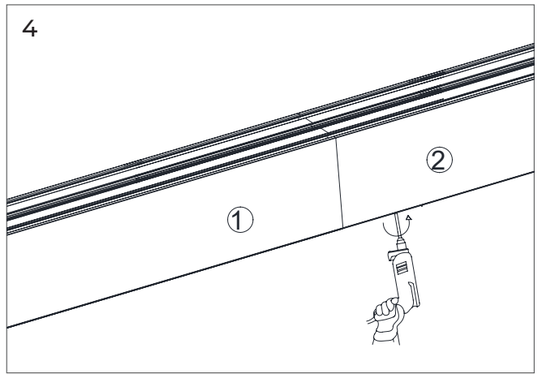

4. Repeat on other side

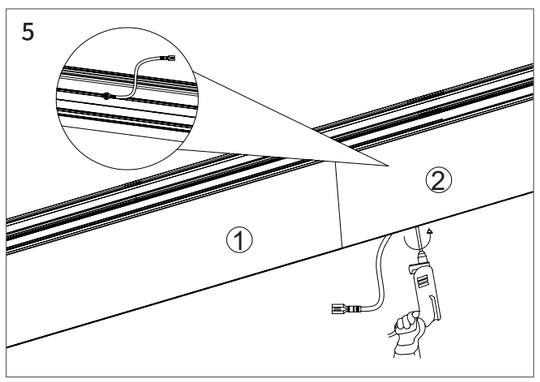


5. Attach earth wire.

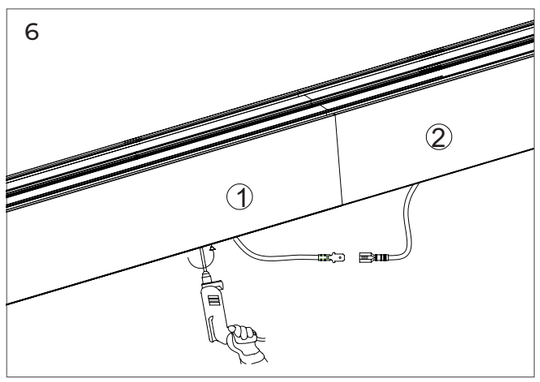


6. Do same on other side.


Joiner

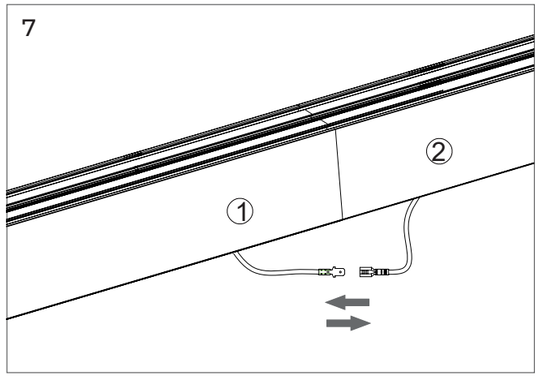


7. Connect earth cables from the 2 sides of profiles

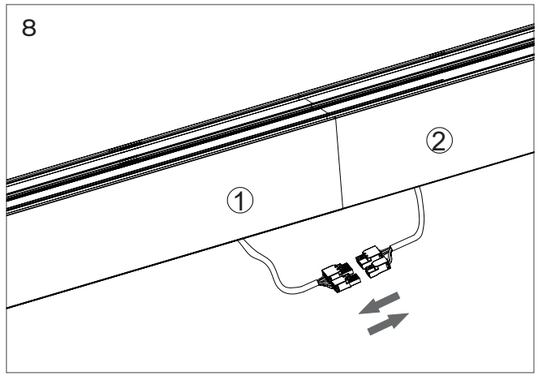


8. Refer to the wiring diagram to connect the power and pair up the male and female plugs

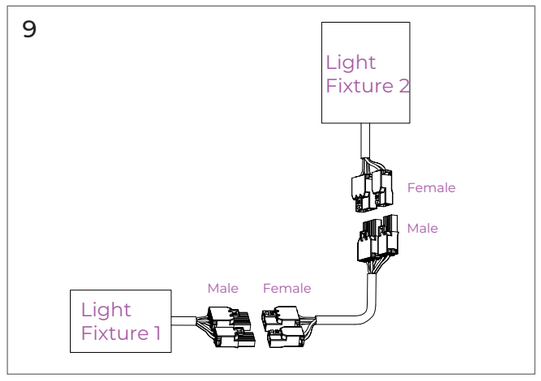

9. L Corner wiring diagram, connect the male and female connecting wires

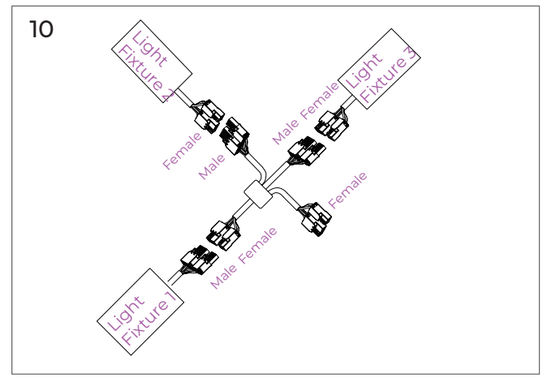

10. T Corner Wiring Diagram. With 4 male and Female connectors, connect corresponding Connectors to modules leaving 1 end Unconnected

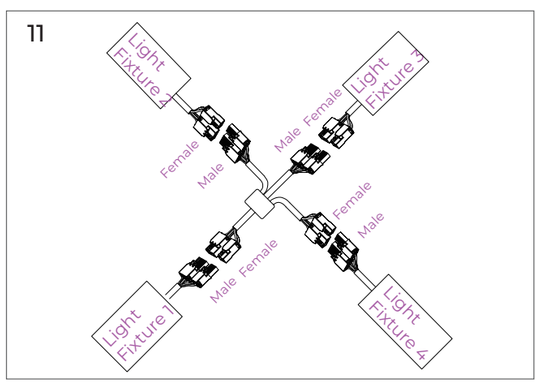

10. X Corner Wiring Diagram. With 4 male and Female connectors, connect corresponding Connectors to modules.