

Indoor Luminaire Photometric Data


Description Information

Luminary Name: HCP-809024-5000K RA90 15D	Lum. Catalog:	Test ID: 01
Lamp Name:	Lamp Catalog: LED	Test Date: 2020/09/21
Manufacture: Havit Commercial	Shld. Ang(°):	Test Machine: GON-2000
Test Lab: Quality Department	Frequency (Hz):	Lamp CCT (K): Ra:
Lum. Size (W*L*H): 0.050m*0.000m*0.080m	Lum. Area (m2): 0.016	Lum. W (kg): 0.000
Test System: C, γ	Test Step: C=90.0 γ=1.0	Temp. (°C): 25
		Humidity (%): 50.0


Character Parameter

Lamp Speciality Parameter	Luminaire Speciality Parameter	
Rated Flux(lm): 612.860	Luminary Flux(lm): 612.859	Field Angle(10%Imax): 73.9(°)
Rated Power(W):	Luminary Efficiency: 100.00%	Down Lumens&Percent: 608.621lm 99.31%
Rated Voltage(V):	Luminary EER(lm/W): 70.419	Up Lumens&Percent: 4.238lm 0.69%
Tested Power(W): 8.703	Max. Candela(cd): 1932.043	S/MH: C0_a180=0.318 C90_270=0.311
Lamps' Inside: 1	Max Cand@Ang. (°): C=0.0 γ=1.0	CIE Type: Semi-Direct
Tested Electrics (V, A, pf): 240.3, 0.039, 0.909	Beam Angle(50%Imax): 18.6(°)	ErP Φ use(90°): 563.424lm
Lamp Size (W*L*H): 0.050m*0.000m*0.080m	Left=-8.8°, Right=9.8°	IRF (%): 659.538

C Plane Distribution Diagram

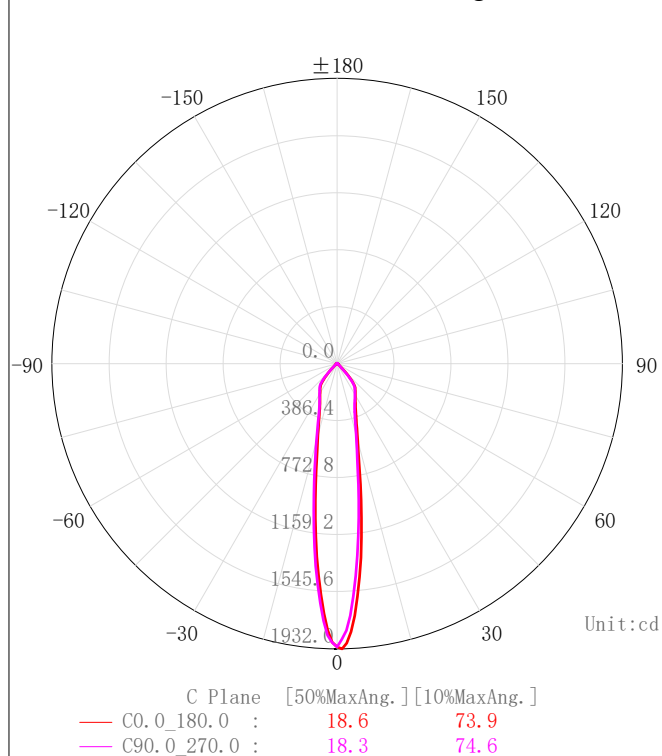


C0 Space ISO Illuminance Curve

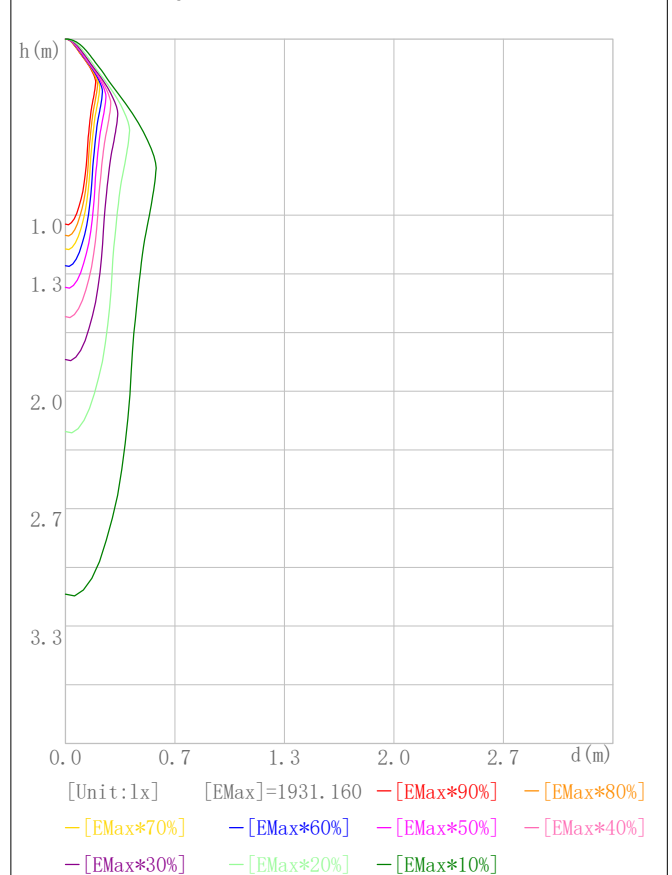

2D Plane Light Intensity Distribution Curve

Lum. Name: HCP-809024-5000K RA90 15D	Lum. Catalog:	Test ID: 01
Lamp Name:	Lamp Catalog: LED	Test Lab: Quality Department
Manufacture: Havit Commercial	Test Machine: GON-2000	Test Date: 2020/09/21


C Plane Distribution Diagram

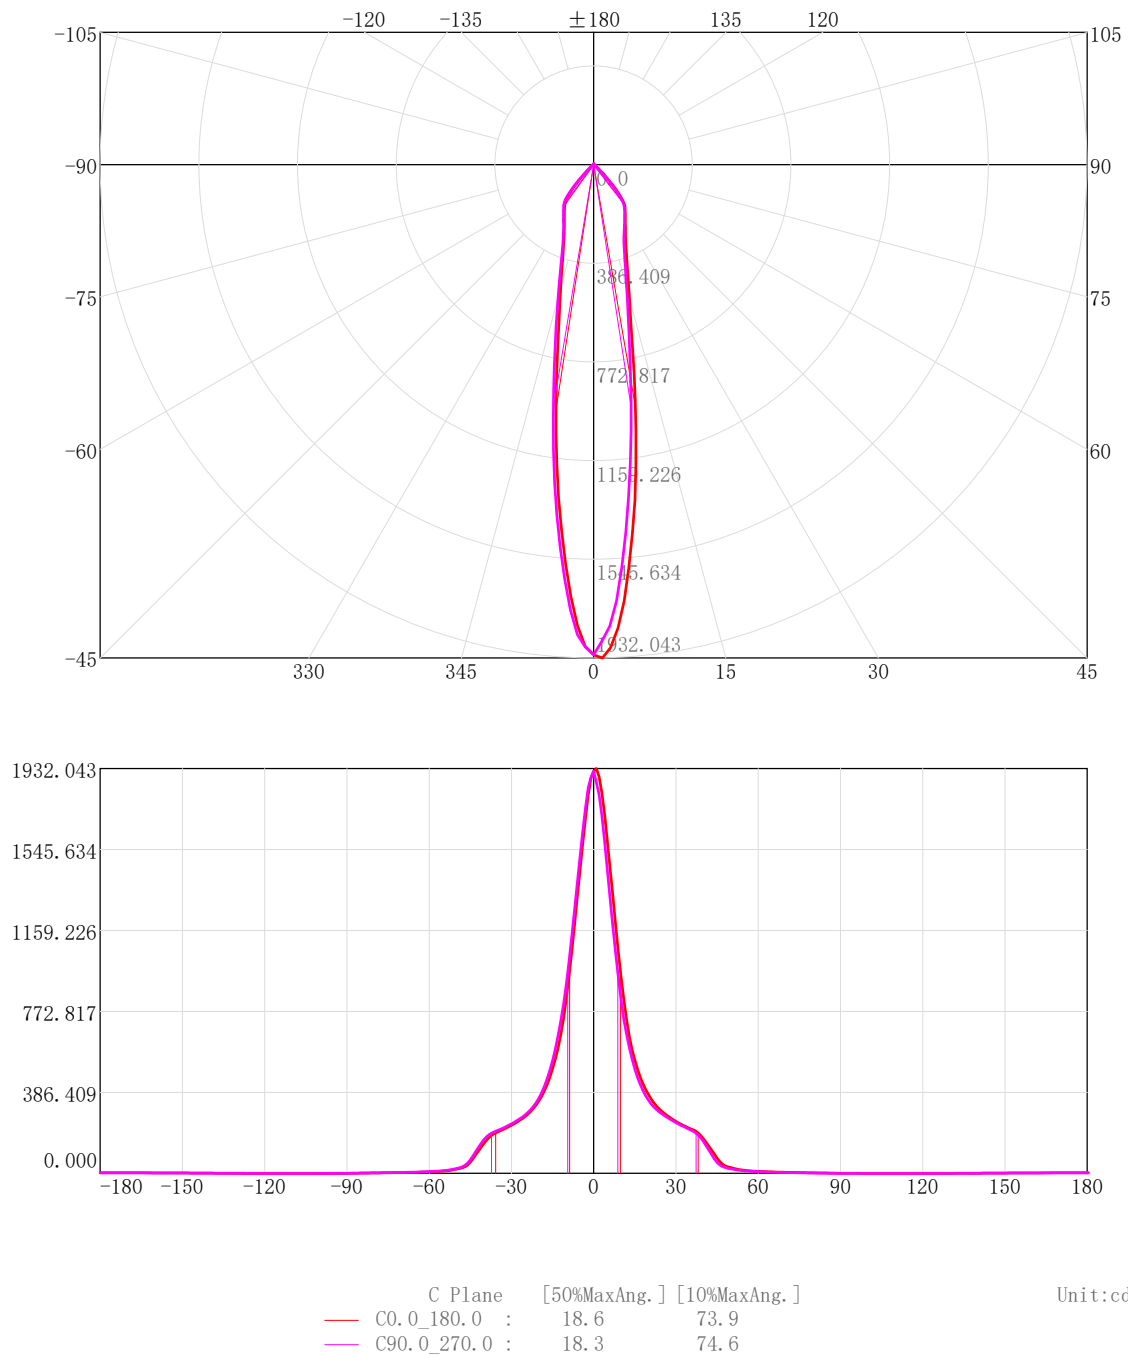

3D Light Intensity Distribution Modal

Lum. Name: HCP-809024-5000K RA90 15D	Lum. Catalog:	Test ID: 01
Lamp Name:	Lamp Catalog: LED	Test Lab: Quality Department
Manufacture: Havit Commercial	Test Machine: GON-2000	Test Date: 2020/09/21

3D Light Intensity Distribution Modal

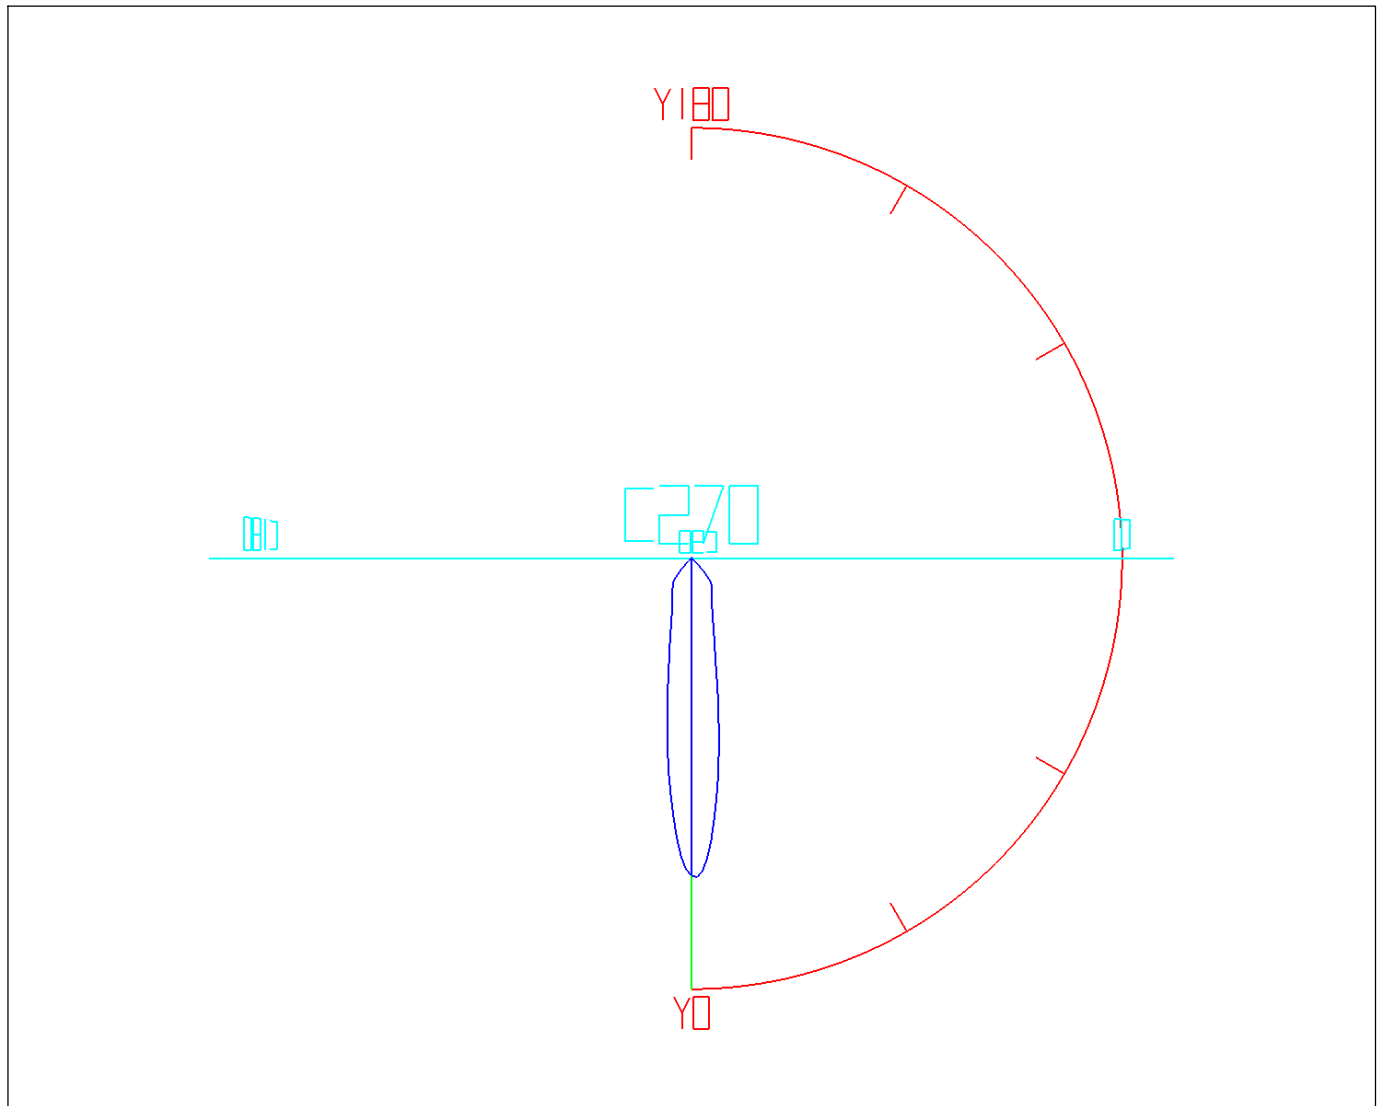

Curves: 3D Model — Fixture — Vert. HUD — Hori. HUD —
View Angles: Orient:0 Tilt:0 Roll:0 Spin:0

Zonal Flux Tabulation

Zone (γ)	Zone Flux (lm)	Sums Flux (lm)	Zone%Lamp	Sums%Lamp	Zone (γ)	Zone Flux (lm)	Sums Flux (lm)	Zone%Lamp	Sums%Lamp
0.0-1.0	1.82	1.82	0.30	0.30	47.0-48.0	2.71	579.90	0.44	94.62
1.0-2.0	5.35	7.18	0.87	1.17	48.0-49.0	2.35	582.25	0.38	95.01
2.0-3.0	8.56	15.74	1.40	2.57	49.0-50.0	2.10	584.35	0.34	95.35
3.0-4.0	11.26	26.99	1.84	4.40	50.0-51.0	1.88	586.23	0.31	95.65
4.0-5.0	13.39	40.39	2.19	6.59	51.0-52.0	1.66	587.89	0.27	95.93
5.0-6.0	15.01	55.40	2.45	9.04	52.0-53.0	1.47	589.36	0.24	96.16
6.0-7.0	16.13	71.52	2.63	11.67	53.0-54.0	1.32	590.68	0.22	96.38
7.0-8.0	16.75	88.27	2.73	14.40	54.0-55.0	1.21	591.88	0.20	96.58
8.0-9.0	16.96	105.24	2.77	17.17	55.0-56.0	1.11	592.99	0.18	96.76
9.0-10.0	16.86	122.09	2.75	19.92	56.0-57.0	1.04	594.03	0.17	96.93
10.0-11.0	16.54	138.63	2.70	22.62	57.0-58.0	0.97	595.00	0.16	97.09
11.0-12.0	16.11	154.75	2.63	25.25	58.0-59.0	0.92	595.92	0.15	97.24
12.0-13.0	15.67	170.42	2.56	27.81	59.0-60.0	0.86	596.78	0.14	97.38
13.0-14.0	15.28	185.70	2.49	30.30	60.0-61.0	0.81	597.60	0.13	97.51
14.0-15.0	14.93	200.63	2.44	32.74	61.0-62.0	0.76	598.36	0.12	97.63
15.0-16.0	14.59	215.21	2.38	35.12	62.0-63.0	0.72	599.08	0.12	97.75
16.0-17.0	14.27	229.48	2.33	37.44	63.0-64.0	0.68	599.75	0.11	97.86
17.0-18.0	13.99	243.46	2.28	39.73	64.0-65.0	0.64	600.39	0.10	97.97
18.0-19.0	13.74	257.20	2.24	41.97	65.0-66.0	0.61	601.00	0.10	98.07
19.0-20.0	13.51	270.71	2.20	44.17	66.0-67.0	0.58	601.58	0.09	98.16
20.0-21.0	13.33	284.04	2.17	46.35	67.0-68.0	0.55	602.13	0.09	98.25
21.0-22.0	13.20	297.25	2.15	48.50	68.0-69.0	0.52	602.65	0.09	98.33
22.0-23.0	13.14	310.38	2.14	50.64	69.0-70.0	0.50	603.14	0.08	98.41
23.0-24.0	13.10	323.49	2.14	52.78	70.0-71.0	0.47	603.62	0.08	98.49
24.0-25.0	13.09	336.58	2.14	54.92	71.0-72.0	0.45	604.07	0.07	98.57
25.0-26.0	13.10	349.68	2.14	57.06	72.0-73.0	0.43	604.49	0.07	98.63
26.0-27.0	13.10	362.78	2.14	59.19	73.0-74.0	0.41	604.90	0.07	98.70
27.0-28.0	13.11	375.89	2.14	61.33	74.0-75.0	0.38	605.28	0.06	98.76
28.0-29.0	13.12	389.01	2.14	63.47	75.0-76.0	0.36	605.65	0.06	98.82
29.0-30.0	13.12	402.13	2.14	65.62	76.0-77.0	0.34	605.99	0.06	98.88
30.0-31.0	13.11	415.24	2.14	67.75	77.0-78.0	0.32	606.31	0.05	98.93
31.0-32.0	13.10	428.34	2.14	69.89	78.0-79.0	0.30	606.61	0.05	98.98
32.0-33.0	13.10	441.44	2.14	72.03	79.0-80.0	0.28	606.89	0.05	99.03
33.0-34.0	13.08	454.52	2.13	74.16	80.0-81.0	0.26	607.16	0.04	99.07
34.0-35.0	13.04	467.56	2.13	76.29	81.0-82.0	0.24	607.40	0.04	99.11
35.0-36.0	12.99	480.55	2.12	78.41	82.0-83.0	0.22	607.62	0.04	99.15
36.0-37.0	12.89	493.44	2.10	80.51	83.0-84.0	0.21	607.83	0.03	99.18
37.0-38.0	12.65	506.09	2.06	82.58	84.0-85.0	0.19	608.01	0.03	99.21
38.0-39.0	12.18	518.28	1.99	84.57	85.0-86.0	0.17	608.18	0.03	99.24
39.0-40.0	11.45	529.73	1.87	86.44	86.0-87.0	0.15	608.33	0.02	99.26
40.0-41.0	10.48	540.21	1.71	88.15	87.0-88.0	0.12	608.45	0.02	99.28
41.0-42.0	9.34	549.55	1.52	89.67	88.0-89.0	0.10	608.55	0.02	99.30
42.0-43.0	8.07	557.62	1.32	90.99	89.0-90.0	0.07	608.62	0.01	99.31
43.0-44.0	6.71	564.32	1.09	92.08	90.0-91.0	0.06	608.68	0.01	99.32
44.0-45.0	5.37	569.69	0.88	92.96	91.0-92.0	0.05	608.73	0.01	99.33
45.0-46.0	4.19	573.89	0.68	93.64	92.0-93.0	0.05	608.78	0.01	99.33
46.0-47.0	3.30	577.19	0.54	94.18	93.0-94.0	0.04	608.82	0.01	99.34


Zonal Flux Tabulation - (Cont.)

Zone (γ)	Zone Flux (lm)	Sums Flux (lm)	Zone%Lamp	Sums%Lamp	Zone (γ)	Zone Flux (lm)	Sums Flux (lm)	Zone%Lamp	Sums%Lamp
94.0-95.0	0.03	608.85	0.01	99.35	141.0-142.0	0.09	609.96	0.01	99.53
95.0-96.0	0.03	608.88	0.00	99.35	142.0-143.0	0.09	610.06	0.01	99.54
96.0-97.0	0.02	608.90	0.00	99.35	143.0-144.0	0.10	610.15	0.02	99.56
97.0-98.0	0.02	608.92	0.00	99.36	144.0-145.0	0.10	610.25	0.02	99.57
98.0-99.0	0.02	608.94	0.00	99.36	145.0-146.0	0.10	610.35	0.02	99.59
99.0-100.0	0.02	608.96	0.00	99.36	146.0-147.0	0.10	610.45	0.02	99.61
100.0-101.0	0.01	608.97	0.00	99.37	147.0-148.0	0.11	610.56	0.02	99.62
101.0-102.0	0.01	608.98	0.00	99.37	148.0-149.0	0.11	610.67	0.02	99.64
102.0-103.0	0.01	608.99	0.00	99.37	149.0-150.0	0.11	610.78	0.02	99.66
103.0-104.0	0.01	609.00	0.00	99.37	150.0-151.0	0.11	610.88	0.02	99.68
104.0-105.0	0.01	609.01	0.00	99.37	151.0-152.0	0.11	610.99	0.02	99.70
105.0-106.0	0.01	609.01	0.00	99.37	152.0-153.0	0.11	611.10	0.02	99.71
106.0-107.0	0.01	609.02	0.00	99.37	153.0-154.0	0.11	611.21	0.02	99.73
107.0-108.0	0.00	609.02	0.00	99.37	154.0-155.0	0.11	611.31	0.02	99.75
108.0-109.0	0.00	609.03	0.00	99.37	155.0-156.0	0.10	611.42	0.02	99.76
109.0-110.0	0.00	609.03	0.00	99.38	156.0-157.0	0.10	611.52	0.02	99.78
110.0-111.0	0.00	609.03	0.00	99.38	157.0-158.0	0.10	611.62	0.02	99.80
111.0-112.0	0.00	609.04	0.00	99.38	158.0-159.0	0.10	611.72	0.02	99.81
112.0-113.0	0.00	609.04	0.00	99.38	159.0-160.0	0.10	611.82	0.02	99.83
113.0-114.0	0.00	609.04	0.00	99.38	160.0-161.0	0.09	611.91	0.02	99.84
114.0-115.0	0.00	609.05	0.00	99.38	161.0-162.0	0.09	612.00	0.01	99.86
115.0-116.0	0.00	609.05	0.00	99.38	162.0-163.0	0.09	612.08	0.01	99.87
116.0-117.0	0.00	609.06	0.00	99.38	163.0-164.0	0.08	612.17	0.01	99.89
117.0-118.0	0.00	609.06	0.00	99.38	164.0-165.0	0.08	612.25	0.01	99.90
118.0-119.0	0.01	609.07	0.00	99.38	165.0-166.0	0.08	612.32	0.01	99.91
119.0-120.0	0.01	609.07	0.00	99.38	166.0-167.0	0.07	612.39	0.01	99.92
120.0-121.0	0.01	609.08	0.00	99.38	167.0-168.0	0.07	612.46	0.01	99.93
121.0-122.0	0.01	609.09	0.00	99.38	168.0-169.0	0.06	612.52	0.01	99.94
122.0-123.0	0.01	609.10	0.00	99.39	169.0-170.0	0.06	612.58	0.01	99.95
123.0-124.0	0.01	609.11	0.00	99.39	170.0-171.0	0.05	612.63	0.01	99.96
124.0-125.0	0.01	609.13	0.00	99.39	171.0-172.0	0.05	612.68	0.01	99.97
125.0-126.0	0.02	609.14	0.00	99.39	172.0-173.0	0.04	612.72	0.01	99.98
126.0-127.0	0.02	609.16	0.00	99.40	173.0-174.0	0.04	612.76	0.01	99.98
127.0-128.0	0.02	609.18	0.00	99.40	174.0-175.0	0.03	612.79	0.01	99.99
128.0-129.0	0.03	609.21	0.00	99.40	175.0-176.0	0.03	612.81	0.00	99.99
129.0-130.0	0.03	609.24	0.00	99.41	176.0-177.0	0.02	612.83	0.00	100.00
130.0-131.0	0.03	609.28	0.01	99.42	177.0-178.0	0.01	612.85	0.00	100.00
131.0-132.0	0.04	609.31	0.01	99.42	178.0-179.0	0.01	612.86	0.00	100.00
132.0-133.0	0.04	609.36	0.01	99.43	179.0-180.0	0.00	612.86	0.00	100.00
133.0-134.0	0.05	609.40	0.01	99.44					
134.0-135.0	0.05	609.46	0.01	99.44					
135.0-136.0	0.06	609.51	0.01	99.45					
136.0-137.0	0.06	609.58	0.01	99.46					
137.0-138.0	0.07	609.64	0.01	99.48					
138.0-139.0	0.07	609.72	0.01	99.49					
139.0-140.0	0.08	609.79	0.01	99.50					
140.0-141.0	0.08	609.88	0.01	99.51					

Rectangle ISO Lighting Intensity Diagram

Lum. Name: HCP-809024-5000K RA90 15D	Lum. Catalog:	Test ID: 01
Lamp Name:	Lamp Catalog: LED	Test Lab: Quality Department
Manufacture: Havit Commercial	Test Machine: GON-2000	Test Date: 2020/09/21

ISO Lighting Intensity Curve

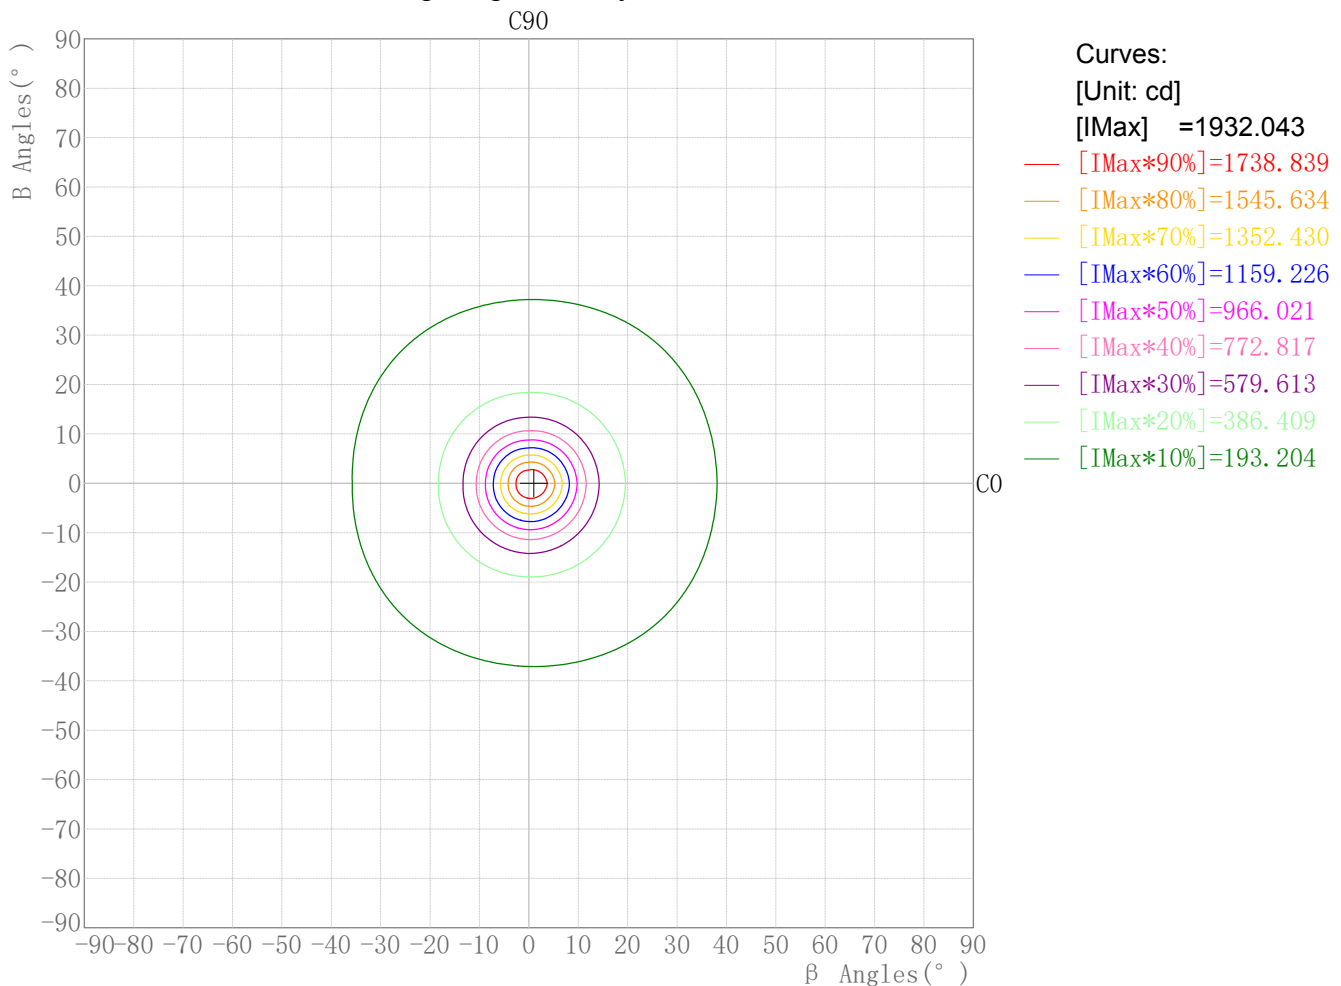


Maximum Light Intensity(cd): 1932.04

Maximum Cand.@Angle: H=1.0°,V=0.0°

Plane ISO-Illuminance Diagram

Lum. Name: HCP-809024-5000K RA90 15D	Lum. Catalog:	Test ID: 01
Lamp Name:	Lamp Catalog: LED	Test Lab: Quality Department
Manufacture: Havit Commercial	Test Machine: GON-2000	Test Date: 2020/09/21


Plane ISO-Illuminance Curve

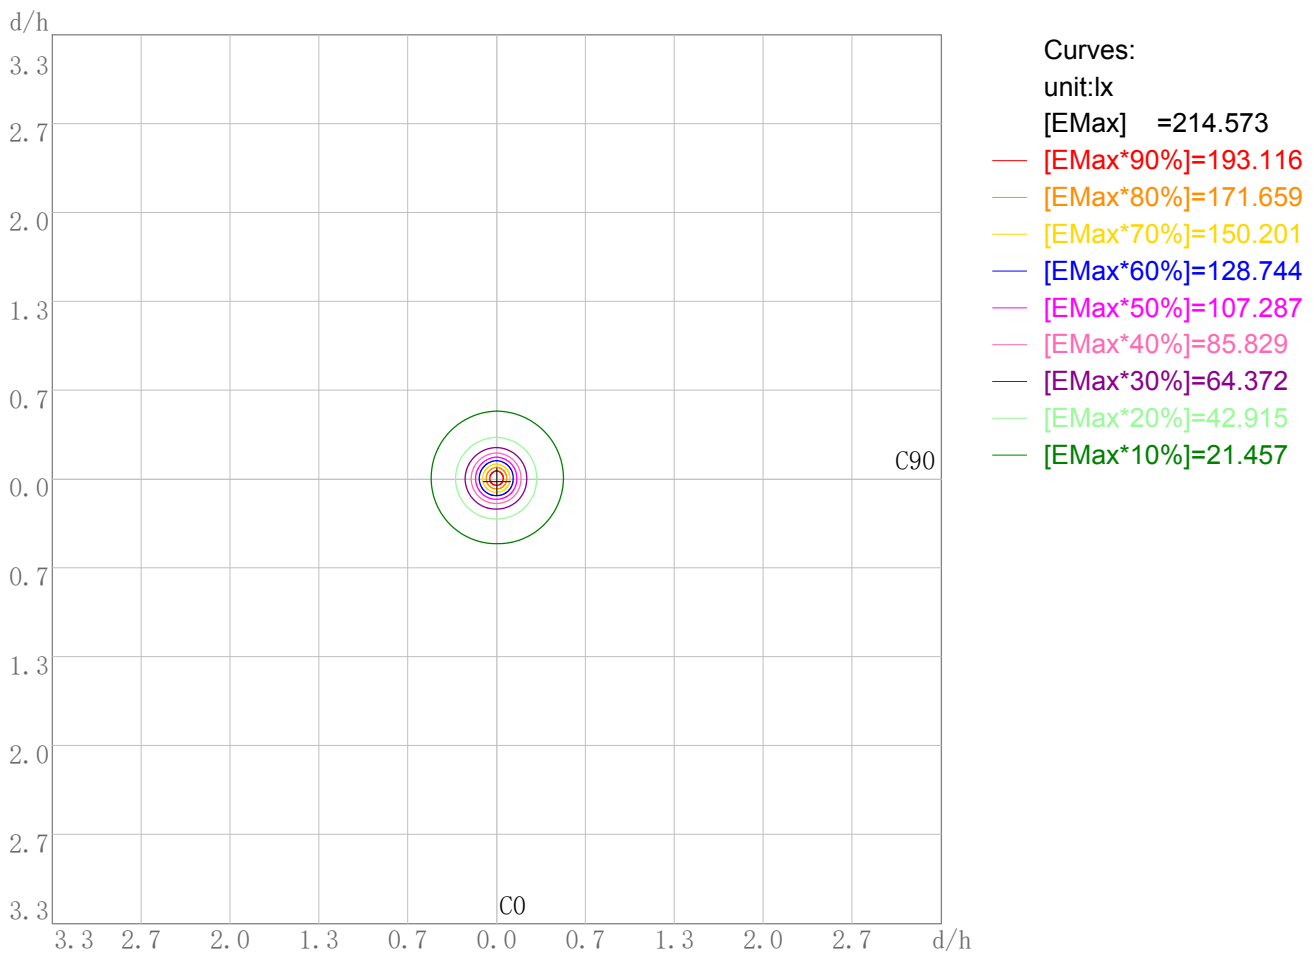

3D Plane ISO Illuminance Diagram

Lum. Name: HCP-809024-5000K RA90 15D	Lum. Catalog:	Test ID: 01
Lamp Name:	Lamp Catalog: LED	Test Lab: Quality Department
Manufacture: Havit Commercial	Test Machine: GON-2000	Test Date: 2020/09/21

3D Plane Illuminance Model

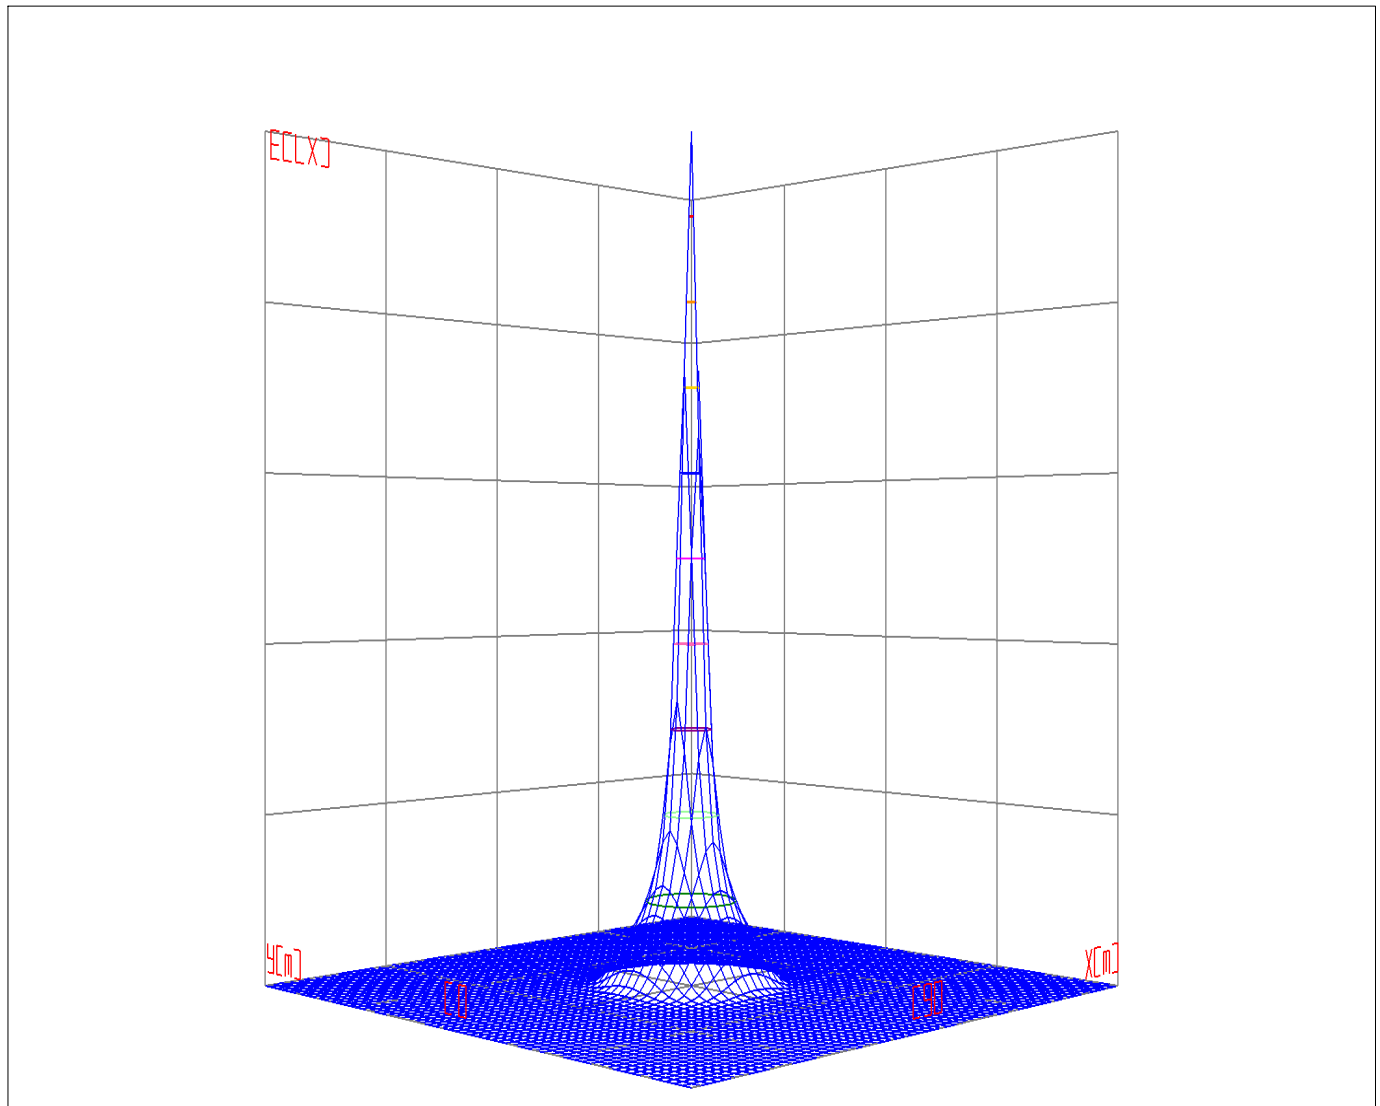


Curves: 3D Model — 90% — 80% — 70% — 60% — 50% — 40% — 30% — 20% — 10% —
View Angles(deg): 0 Height(m): 3.0 Distance(m): 10.0

Space ISO Illuminance Diagram

Lum. Name: HCP-809024-5000K RA90 15D	Lum. Catalog:	Test ID: 01
Lamp Name:	Lamp Catalog: LED	Test Lab: Quality Department
Manufacture: Havit Commercial	Test Machine: GON-2000	Test Date: 2020/09/21

Space ISO Illuminance Curve

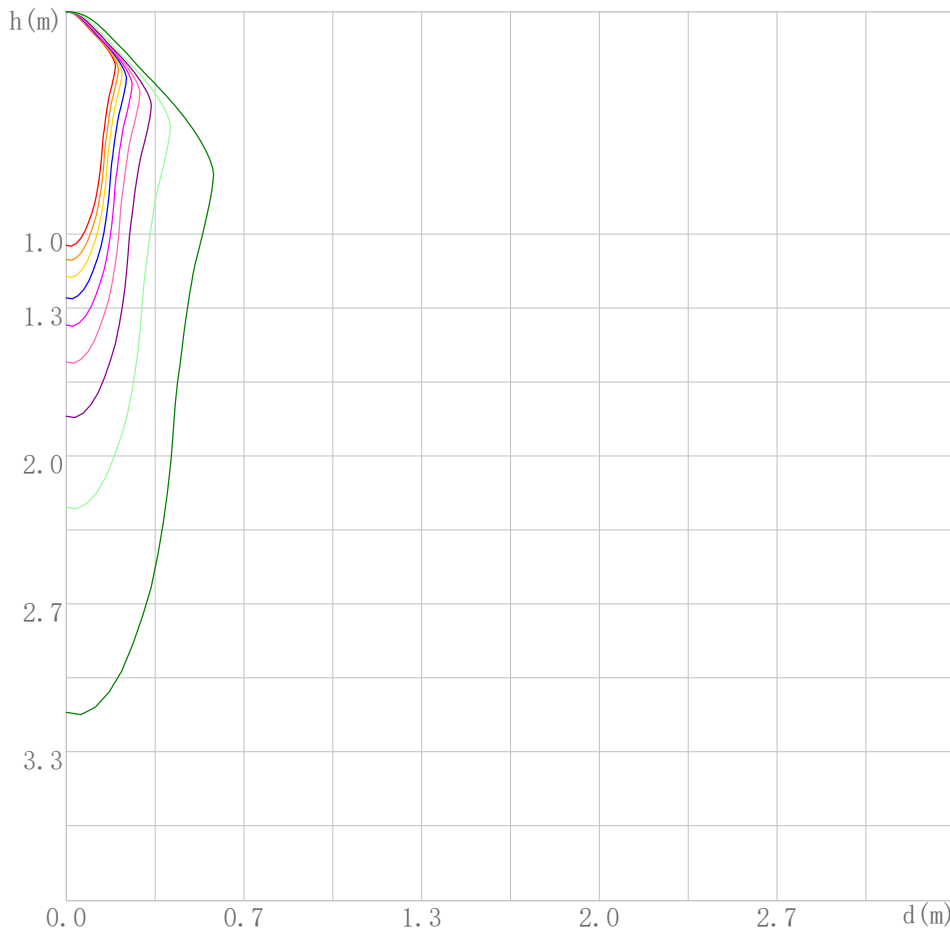

Curves:

[Unit: lx]

[E_{Max}] = 1931.160

— [E_{Max}*90%]=1738.044

— [E_{Max}*80%]=1544.928

— [E_{Max}*70%]=1351.812

— [E_{Max}*60%]=1158.696

— [E_{Max}*50%]=965.580

— [E_{Max}*40%]=772.464

— [E_{Max}*30%]=579.348

— [E_{Max}*20%]=386.232

— [E_{Max}*10%]=193.116


Space Plane Maximum Illuminance and @Angle:1931.16lx,1.0deg

Plane Maximum Lighting Intensity and @Angle:1932.043cd,0deg

Illuminance-Distance Diagram

Lum. Name: HCP-809024-5000K RA90 15D	Lum. Catalog:	Test ID: 01
Lamp Name:	Lamp Catalog: LED	Test Lab: Quality Department
Manufacture: Havit Commercial	Test Machine: GON-2000	Test Date: 2020/09/21

Illuminance-Distance Curve

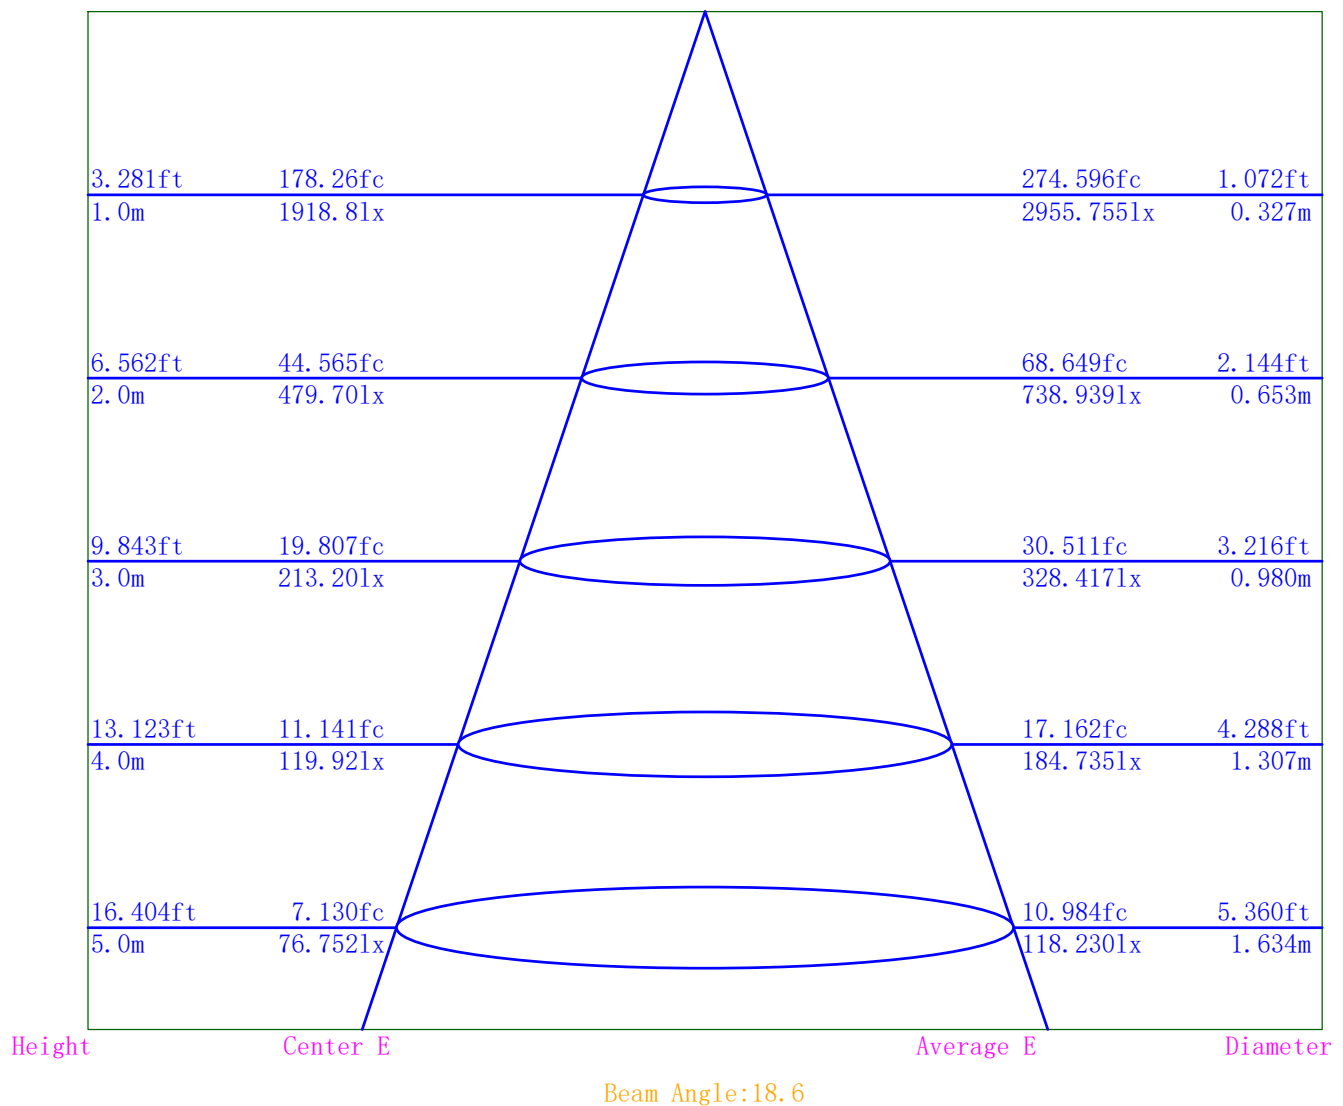

Indoor Luminance Limiting Curves

Lum. Name: HCP-809024-5000K RA90 15D	Lum. Catalog:	Test ID: 01
Lamp Name:	Lamp Catalog: LED	Test Lab: Quality Department
Manufacture: Havit Commercial	Test Machine: GON-2000	Test Date: 2020/09/21


Glare Grade Table

GI	Quality	Using Illuminance							
1.15	A	2000	1000	500	<=300				
1.5	B		2000	1000	500	<=300			
1.85	C			2000	1000	500	<=300		
2.2	D				2000	1000	500	<=300	
2.55	E	a				2000	1000	500	<=300
			b	c	d	e	f	g	h

Luminance Table

Gama (deg)	45	50	55	60	65	70	75	80	85
C0	6575	2767	1669	1296	1102	1013	997	1076	1459
C90	4760	2188	1359	1078	900	805	764	762	881

Luminance Limiting Curve

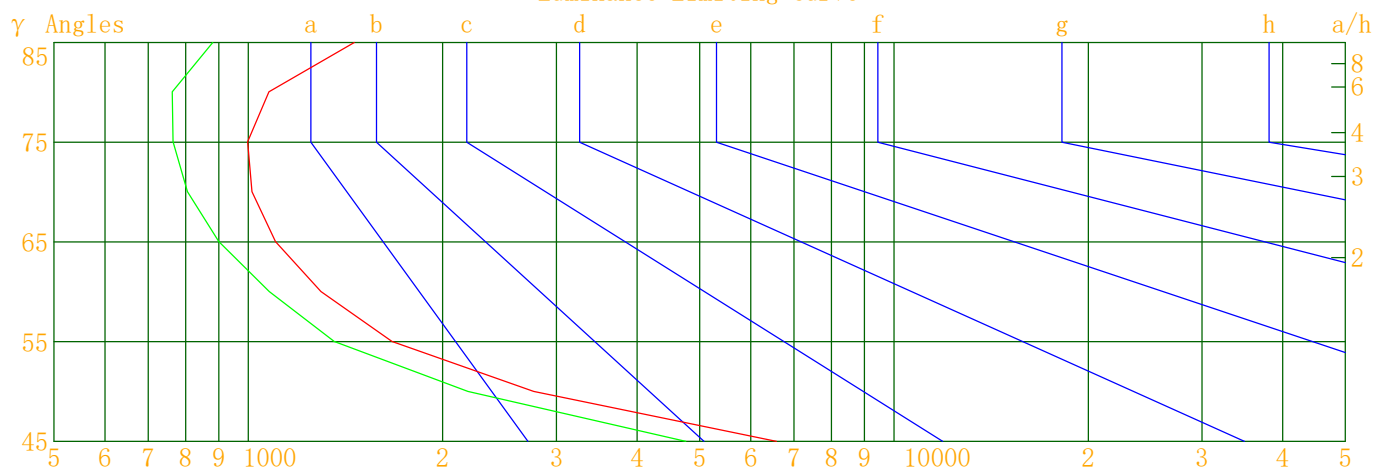


Luminous Size: Length(m)=0.000 Width(m)=-0.050 Height(m)=0.080 Area(m^2)=0.015708

Luminous Type: Without Luminous Side

Luminous Curves: C0-C180 Color: — C90-C270 Color: —

Indoor Budgetary Estimate Table

Lum. Name: HCP-809024-5000K RA90 15D	Lum. Catalog:	Test ID: 01
Lamp Name:	Lamp Catalog: LED	Test Lab: Quality Department
Manufacture: Havit Commercial	Test Machine: GON-2000	Test Date: 2020/09/21

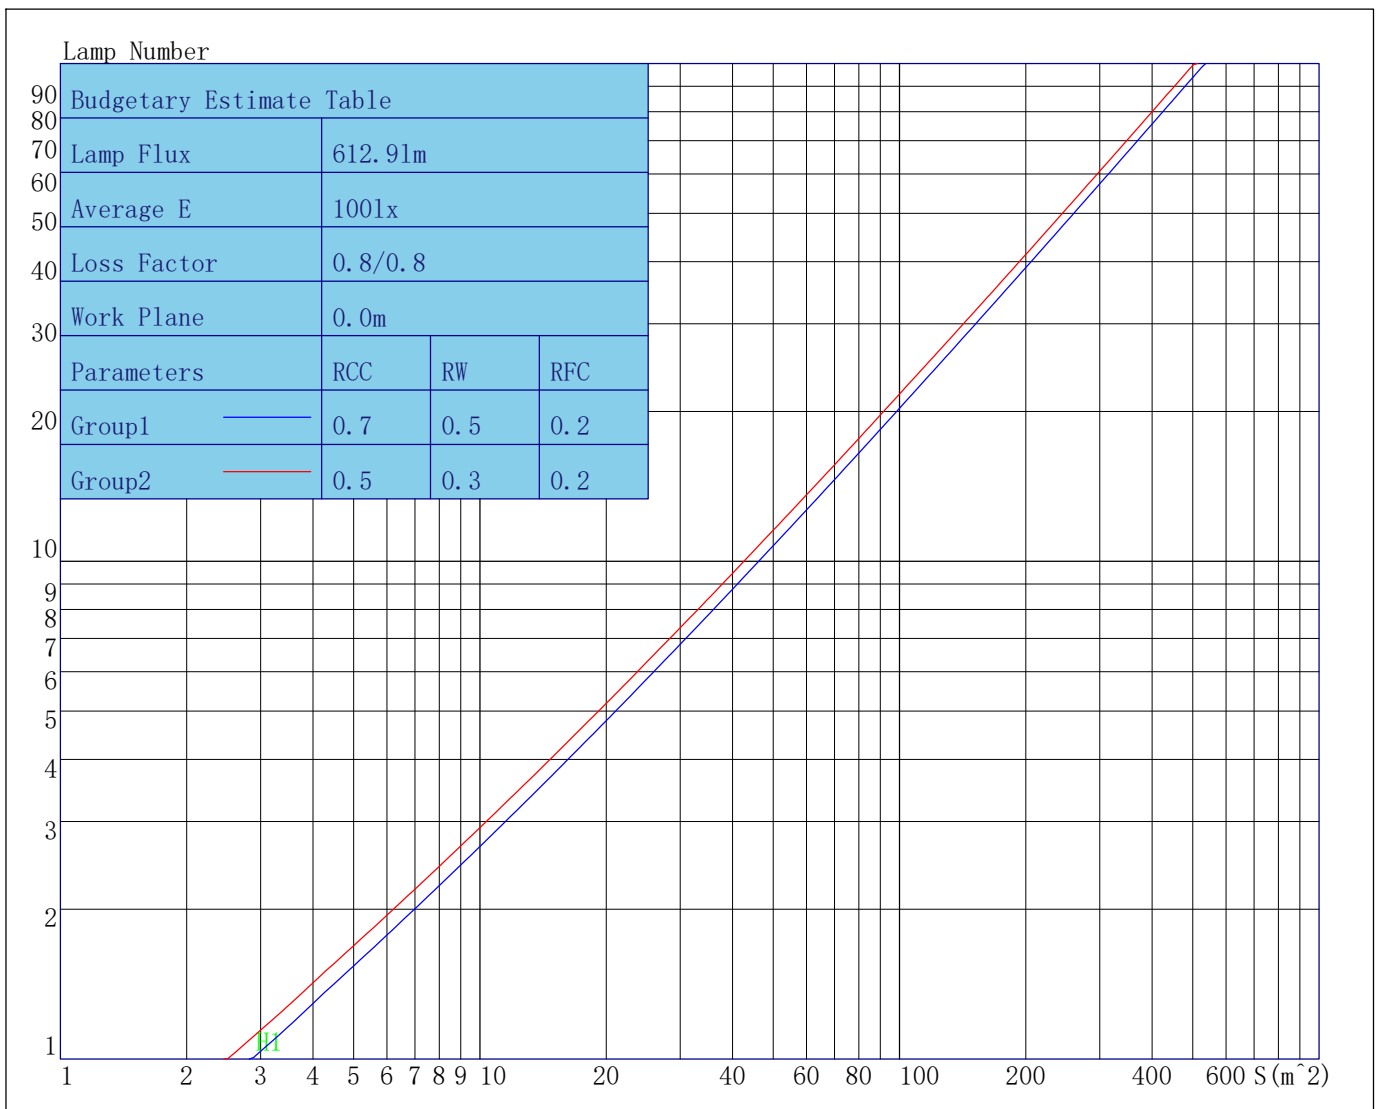

Parameters1: Rhocc = 0.7 Rhow = 0.5 Rhofc = 0.2 LLF = 0.8

Parameters2: Rhocc = 0.5 Rhow = 0.3 Rhofc = 0.2 LLF = 0.8

Average Illuminance(lx): 100 Cavity Height: H1(m) = 2

Indoor Coefficient of Utilization Table

Lum. Name: HCP-809024-5000K RA90 15D	Lum. Catalog:	Test ID: 01
Lamp Name:	Lamp Catalog: LED	Test Lab: Quality Department
Manufacture: Havit Commercial	Test Machine: GON-2000	Test Date: 2020/09/21

Coefficients of Utilization – Zonal Cavity Method																		
Coef.	Effective Floor Cavity Reflectance RFC=0.20																	
RhoCC (%)	80				70				50			30			10			0
RhoW (%)	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10	0
RCR	Coefficient of Utilization (%)																	
0	119	119	119	119	116	116	116	116	111	111	111	106	106	106	101	101	101	99
1	113	110	108	106	111	108	106	104	104	102	100	100	99	97	97	95	94	93
2	108	103	99	95	105	101	97	94	97	94	92	94	92	90	92	90	88	86
3	102	96	91	87	100	94	90	86	92	88	85	89	86	83	87	84	82	80
4	97	90	84	80	95	88	83	79	86	82	78	84	80	77	82	79	76	75
5	92	84	78	74	91	83	78	74	81	77	73	80	75	72	78	74	72	70
6	88	79	73	69	87	78	73	69	77	72	68	75	71	68	74	70	67	66
7	84	75	69	65	83	74	69	65	73	68	64	72	67	64	70	67	63	62
8	80	71	65	61	79	70	65	61	69	64	61	68	64	60	67	63	60	59
9	77	67	62	58	76	67	61	58	66	61	57	65	60	57	64	60	57	56
10	74	64	59	55	73	64	58	55	63	58	55	62	58	54	61	57	54	53

Unified Glare Rating Table

Lum. Name: HCP-809024-5000K RA90 15D	Lum. Catalog:	Test ID: 01
Lamp Name:	Lamp Catalog: LED	Test Lab: Quality Department
Manufacture: Havit Commercial	Test Machine: GON-2000	Test Date: 2020/09/21

Unified Glare Rating Table

Ceiling RCC	0.70	0.70	0.50	0.50	0.30	0.70	0.70	0.50	0.50	0.30
Wall RW	0.50	0.30	0.50	0.30	0.30	0.50	0.30	0.50	0.30	0.30
Floor RFC	0.20	0.20	0.20	0.20	0.20	0.20	0.20	0.20	0.20	0.20
Room Size	Vewed crosswise					Vewed endwise				
X=2H Y=2H	15.0	16.0	15.3	16.3	16.7	14.4	15.5	14.8	15.8	16.1
	14.9	15.8	15.3	16.2	16.6	14.3	15.3	14.7	15.6	16.0
	14.9	15.8	15.3	16.1	16.5	14.3	15.2	14.7	15.5	15.9
	14.9	15.7	15.3	16.1	16.5	14.2	15.0	14.7	15.4	15.8
	14.9	15.6	15.3	16.0	16.5	14.2	15.0	14.7	15.4	15.8
	14.9	15.6	15.3	16.0	16.4	14.2	14.9	14.6	15.3	15.8
X=4H Y=2H	14.7	15.6	15.2	16.0	16.4	14.2	15.1	14.6	15.4	15.8
	14.7	15.4	15.2	15.9	16.3	14.1	14.9	14.6	15.3	15.7
	14.7	15.4	15.2	15.8	16.3	14.1	14.8	14.6	15.2	15.7
	14.8	15.3	15.3	15.8	16.3	14.1	14.7	14.6	15.1	15.6
	14.8	15.3	15.3	15.8	16.3	14.1	14.6	14.6	15.1	15.6
	14.9	15.3	15.4	15.8	16.3	14.1	14.6	14.6	15.1	15.6
X=8H Y=4H	14.6	15.2	15.1	15.6	16.1	14.0	14.5	14.5	15.0	15.5
	14.7	15.1	15.3	15.7	16.2	14.1	14.5	14.6	15.0	15.5
	14.8	15.2	15.3	15.7	16.2	14.1	14.4	14.6	15.0	15.5
	14.9	15.2	15.5	15.8	16.3	14.1	14.4	14.6	14.9	15.5
X=12H Y=4H	14.6	15.0	15.1	15.5	16.0	14.0	14.4	14.5	14.9	15.4
	14.7	15.1	15.2	15.6	16.1	14.0	14.4	14.6	14.9	15.4
	14.8	15.1	15.3	15.6	16.2	14.1	14.4	14.6	14.9	15.5
Variations with the observer position at spacings										
S=1.0H	0.2/−0.2					0.4/−0.4				
S=1.5H	0.5/−0.5					0.6/−0.7				
S=2.0H	0.7/−0.7					0.9/−0.9				
Reduced UGR Table:										
Nordic Standard Table:	BK0					BK0				
Correction Value	0.5					0.4				

o the CIE Pub. 117, data has been corrected, refers to the lamp's lumens 8.2flm.

Candela Tabulation

V/H	C0.0	C90.0	C180.0	C270.0
γ 0.0	1918.80	1918.80	1918.80	1918.80
γ 1.0	1932.04	1865.77	1885.80	1888.43
γ 2.0	1893.36	1807.72	1806.22	1840.42
γ 3.0	1817.63	1709.95	1694.54	1743.32
γ 4.0	1711.69	1579.72	1568.18	1625.98
γ 5.0	1582.24	1444.06	1439.20	1503.66
γ 6.0	1452.39	1308.81	1314.38	1378.99
γ 7.0	1324.95	1177.40	1182.15	1252.61
γ 8.0	1187.14	1054.03	1056.61	1128.48
γ 9.0	1057.71	936.90	941.09	1010.21
γ 10.0	938.92	831.07	834.41	901.10
γ 11.0	832.06	738.04	738.57	806.87
γ 12.0	733.46	661.73	659.85	724.73
γ 13.0	652.62	599.86	596.03	654.33
γ 14.0	590.34	545.91	544.73	591.34
γ 15.0	542.03	498.40	499.75	536.66
γ 16.0	498.21	458.09	458.48	490.67
γ 17.0	459.82	425.59	423.40	450.20
γ 18.0	427.80	396.20	394.33	415.47
γ 19.0	400.30	370.64	368.28	384.99
γ 20.0	375.63	349.15	345.52	358.48
γ 21.0	354.37	330.45	326.26	336.81
γ 22.0	335.76	315.85	309.87	319.03
γ 23.0	320.30	303.69	295.60	304.03
γ 24.0	306.88	292.60	283.12	291.09
γ 25.0	295.08	283.12	272.10	279.50
γ 26.0	283.93	274.06	262.20	269.08
γ 27.0	274.35	265.57	253.20	260.11
γ 28.0	264.87	257.31	244.73	251.76
γ 29.0	256.33	249.82	237.11	243.87
γ 30.0	248.34	242.12	229.59	236.22
γ 31.0	240.44	235.34	222.64	229.52
γ 32.0	233.84	228.70	216.03	222.81
γ 33.0	227.46	222.77	209.98	217.04
γ 34.0	221.21	216.10	203.61	210.59
γ 35.0	214.96	209.47	197.93	205.45
γ 36.0	209.08	203.19	191.65	200.01
γ 37.0	203.60	195.42	184.31	194.01
γ 38.0	194.69	184.84	173.45	186.13
γ 39.0	182.01	171.32	159.42	175.90
γ 40.0	166.48	153.50	143.26	161.73
γ 41.0	148.90	133.10	125.73	144.51
γ 42.0	130.90	111.95	107.91	125.24
γ 43.0	111.75	90.11	89.19	103.97
γ 44.0	92.16	69.87	70.47	83.19
γ 45.0	73.03	52.87	53.27	64.15
γ 46.0	56.36	40.64	39.86	48.71

Candela Tabulation - (Cont.)

V/H	C0.0	C90.0	C180.0	C270.0
γ 47.0	44.08	32.80	31.36	38.06
γ 48.0	36.26	28.13	26.70	31.18
γ 49.0	31.54	24.77	23.57	26.80
γ 50.0	27.94	22.09	20.93	23.54
γ 51.0	24.63	19.60	18.16	20.72
γ 52.0	21.34	17.00	15.24	18.18
γ 53.0	18.51	15.09	13.33	16.19
γ 54.0	16.55	13.58	11.97	14.60
γ 55.0	15.04	12.24	10.96	13.11
γ 56.0	13.79	11.30	10.11	11.90
γ 57.0	12.56	10.49	9.41	11.07
γ 58.0	11.67	9.81	8.80	10.34
γ 59.0	10.94	9.13	8.16	9.68
γ 60.0	10.18	8.46	7.56	9.03
γ 61.0	9.43	7.85	7.00	8.43
γ 62.0	8.83	7.33	6.51	7.87
γ 63.0	8.30	6.83	6.07	7.36
γ 64.0	7.76	6.39	5.68	6.89
γ 65.0	7.31	5.98	5.33	6.46
γ 66.0	6.87	5.60	5.02	6.11
γ 67.0	6.48	5.24	4.74	5.78
γ 68.0	6.12	4.93	4.49	5.49
γ 69.0	5.77	4.61	4.26	5.22
γ 70.0	5.44	4.32	4.04	4.98
γ 71.0	5.14	4.05	3.83	4.75
γ 72.0	4.86	3.79	3.64	4.52
γ 73.0	4.57	3.55	3.45	4.30
γ 74.0	4.32	3.31	3.26	4.10
γ 75.0	4.05	3.11	3.08	3.88
γ 76.0	3.81	2.88	2.89	3.67
γ 77.0	3.58	2.67	2.71	3.48
γ 78.0	3.35	2.46	2.53	3.28
γ 79.0	3.14	2.27	2.34	3.09
γ 80.0	2.94	2.08	2.16	2.89
γ 81.0	2.72	1.90	2.00	2.70
γ 82.0	2.55	1.72	1.82	2.51
γ 83.0	2.36	1.54	1.66	2.32
γ 84.0	2.19	1.37	1.48	2.14
γ 85.0	2.00	1.21	1.29	1.95
γ 86.0	1.83	1.02	1.10	1.78
γ 87.0	1.63	0.82	0.88	1.60
γ 88.0	1.44	0.60	0.65	1.39
γ 89.0	1.09	0.38	0.45	1.09
γ 90.0	0.86	0.26	0.35	0.89
γ 91.0	0.75	0.21	0.29	0.80
γ 92.0	0.69	0.17	0.23	0.72
γ 93.0	0.62	0.12	0.17	0.65

Candela Tabulation - (Cont.)

V/H	C0.0	C90.0	C180.0	C270.0
γ 94.0	0.56	0.08	0.11	0.58
γ 95.0	0.50	0.03	0.06	0.51
γ 96.0	0.45	0.00	0.03	0.45
γ 97.0	0.40	0.00	0.00	0.40
γ 98.0	0.36	0.00	0.00	0.34
γ 99.0	0.31	0.00	0.00	0.30
γ 100.0	0.26	0.00	0.00	0.26
γ 101.0	0.22	0.00	0.00	0.22
γ 102.0	0.20	0.00	0.00	0.19
γ 103.0	0.17	0.00	0.00	0.17
γ 104.0	0.14	0.00	0.00	0.14
γ 105.0	0.12	0.00	0.00	0.12
γ 106.0	0.10	0.00	0.00	0.11
γ 107.0	0.09	0.00	0.00	0.10
γ 108.0	0.07	0.00	0.00	0.09
γ 109.0	0.07	0.00	0.00	0.08
γ 110.0	0.05	0.00	0.00	0.08
γ 111.0	0.05	0.00	0.00	0.09
γ 112.0	0.05	0.00	0.00	0.09
γ 113.0	0.05	0.00	0.00	0.09
γ 114.0	0.03	0.00	0.00	0.10
γ 115.0	0.04	0.00	0.00	0.12
γ 116.0	0.03	0.00	0.00	0.12
γ 117.0	0.04	0.00	0.00	0.14
γ 118.0	0.04	0.00	0.00	0.16
γ 119.0	0.05	0.00	0.00	0.18
γ 120.0	0.05	0.00	0.03	0.20
γ 121.0	0.07	0.00	0.05	0.22
γ 122.0	0.09	0.00	0.08	0.25
γ 123.0	0.11	0.00	0.12	0.27
γ 124.0	0.13	0.00	0.16	0.30
γ 125.0	0.17	0.00	0.20	0.33
γ 126.0	0.20	0.02	0.24	0.36
γ 127.0	0.23	0.06	0.28	0.40
γ 128.0	0.27	0.10	0.33	0.44
γ 129.0	0.30	0.15	0.39	0.49
γ 130.0	0.35	0.20	0.44	0.53
γ 131.0	0.40	0.27	0.51	0.58
γ 132.0	0.46	0.33	0.57	0.64
γ 133.0	0.52	0.39	0.64	0.69
γ 134.0	0.57	0.46	0.72	0.77
γ 135.0	0.64	0.54	0.80	0.83
γ 136.0	0.71	0.62	0.89	0.92
γ 137.0	0.79	0.71	0.97	1.00
γ 138.0	0.87	0.79	1.07	1.08
γ 139.0	0.96	0.88	1.16	1.18
γ 140.0	1.05	0.97	1.26	1.27

Candela Tabulation - (Cont.)

V/H	C0.0	C90.0	C180.0	C270.0
γ 141.0	1.13	1.07	1.36	1.36
γ 142.0	1.23	1.17	1.45	1.46
γ 143.0	1.31	1.26	1.53	1.54
γ 144.0	1.40	1.35	1.64	1.64
γ 145.0	1.50	1.44	1.73	1.73
γ 146.0	1.57	1.52	1.81	1.81
γ 147.0	1.66	1.61	1.88	1.89
γ 148.0	1.75	1.68	1.96	1.95
γ 149.0	1.83	1.76	2.02	2.02
γ 150.0	1.90	1.84	2.09	2.08
γ 151.0	1.97	1.89	2.15	2.14
γ 152.0	2.06	1.96	2.21	2.18
γ 153.0	2.12	2.02	2.26	2.24
γ 154.0	2.19	2.07	2.32	2.28
γ 155.0	2.24	2.13	2.37	2.33
γ 156.0	2.31	2.18	2.42	2.38
γ 157.0	2.36	2.22	2.47	2.42
γ 158.0	2.41	2.28	2.52	2.47
γ 159.0	2.46	2.33	2.57	2.50
γ 160.0	2.52	2.38	2.62	2.54
γ 161.0	2.56	2.42	2.66	2.57
γ 162.0	2.61	2.48	2.71	2.61
γ 163.0	2.66	2.52	2.74	2.64
γ 164.0	2.70	2.57	2.78	2.68
γ 165.0	2.74	2.61	2.81	2.71
γ 166.0	2.79	2.66	2.86	2.75
γ 167.0	2.83	2.70	2.89	2.77
γ 168.0	2.87	2.74	2.91	2.81
γ 169.0	2.90	2.78	2.94	2.82
γ 170.0	2.91	2.81	2.95	2.86
γ 171.0	2.94	2.83	2.97	2.88
γ 172.0	2.96	2.86	2.99	2.90
γ 173.0	2.97	2.87	2.99	2.91
γ 174.0	2.99	2.89	3.00	2.92
γ 175.0	3.00	2.90	3.00	2.93
γ 176.0	3.01	2.91	2.99	2.93
γ 177.0	3.01	2.91	3.00	2.94
γ 178.0	3.01	2.92	2.99	2.95
γ 179.0	3.01	2.92	3.01	2.97
γ 180.0	2.99	2.99	2.99	2.99